



MAV - 500
Massey 9540/9545/9560/9565
Model Year 2021 (MY21)
Chopper Installation Guide

CA0118-01_R0_May_2021

Redekop Manufacturing 2014
Saskatoon SK Canada S7K 3J7
Ph: 1.306.931.6664
1.866.REDEKOP (1.866.733.3567)
Email: info@redekopmfg.com
Web: www.redekopmfg.com

Massey 9540/9545/9560/9565
Redekop MAV Chopper Installation Manual - MY21
Table of Contents

	<u>Section</u>
Safety	0
OEM Chopper Removal	1
Installation	2
Plastic Sliders	2.1
Chopper Installation	2.2
Drive Sheave	2.3
Gas Spring	2.4
Shield Mount Brackets	2.5
Speed Sensor	2.6
Drive Belt	2.7
Drive Shield	2.8

0 Safety

0.1 Introduction

0.1.1 IMPORTANT: Read through this instruction thoroughly and familiarize yourself with the machine before removing these components. Do not skip steps or perform them out of order.

This instruction manual explains the proper procedure for preparing the combine and removing the Factory Spreader Components in order to install the Redekop MAV Chopper



0.2 Recognize Safety Information

0.2.1 This is a safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



0.3 Understand Signal Words

0.3.1 A signal word - DANGER, WARNING, or CAUTION - is used with the safety-alert symbol. DANGER identifies the most serious hazards.

WARNING or CAUTION safety signs are located near specific hazards or precautionary areas in this manual.



0.4 Follow Safety Instructions

0.4.1 Carefully read all safety messages in this manual and on your machine. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your dealer.

There can be additional safety information contained on parts and components sourced from suppliers that is not reproduced in this operator's manual.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your dealer.

Other languages are available for this machine. Please contact Redekop



0.5 Safe Operating Practices

0.5.1 DO NOT stand near the straw chopper and Seed Control Unit when combine is running.

ALWAYS refer to your Combine Operator's Manual, and review the Safety section before operating machine. The Combine Operator's Manual details safe operating practices that must be followed to protect you and others from accidental injury and/or death.

Operate Seed Control Unit only when all guards are correctly installed.

Before moving away, always check immediate vicinity of Seed Control Unit (e.g. for children). Ensure adequate visibility. Use a horn as a warning immediately before moving away.

When making turns, always take into consideration the width of the attachment and the fact that the rear end of the machine swings out. Attachments and ground conditions affect the driving characteristics.

Never leave combine unattended as long as engine is running.



0.6 Work In Ventilated Area

0.6.1 Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.




0.7 Remove Key from Ignition

0.7.1 ALWAYS shut off combine engine prior to working on it.

Apply park brake, remove key and lock operators cab.

If the combine is equipped with an additional safety master power switch, turn this to the Power OFF position.

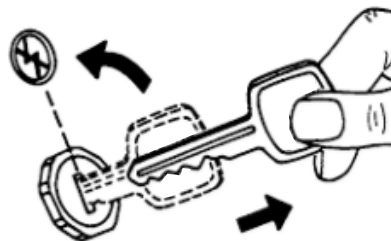

0.8 Block Wheels

0.8.1 Park the combine on level ground.

Always engage the park brake and block the combine wheels prior to working to prevent the combine from moving.



0.9 Practice Safe Maintenance

0.9.1 Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust Seed Control Unit while it is moving. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Keep hands, feet and clothing away from power-driven parts. Tie long hair behind your head. Do not wear rings, jewelry, a necklace, a necktie, scarf, or loose clothing when you work near machine or moving parts. If these items were to get caught, severe injury could result.

Securely support any Seed Control Unit elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

On self-propelled equipment, disconnect battery ground cable (-) before making adjustments on electrical systems or welding on Seed Control Unit.



0.10 Guards and Shields

0.10.1 Keep guards and shields in place at all times. Ensure that they are serviceable and maintained correctly.



0.11 Avoid Contact With Moving Parts

0.11.1 Keep hands, feet and clothing away from power driven parts. Never clean, lubricate or adjust machine when it is running.

Never attempt to clear obstructions from machine unless it is disengaged, engine shut off and key removed.



0.12 Avoid High-Pressure Fluids

0.12.1 Inspect hydraulic hoses periodically - at least once per year - for leakage, kinking, cuts, cracks, abrasion, blisters, corrosion, exposed wire brand or any other signs of wear or damage.

Replace worn or damaged hose assemblies immediately.

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high-pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source.




0.13 Dispose of Waste Properly

0.13.1 Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste includes such items as oil, fuel, coolant, brake fluid, filters and batteries.

Use appropriate tools and personal protective equipment such as clothing, gloves, face shields or glasses, during the removal or handling of objects and materials.

Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

Do not pour waste onto the ground, down a drain, or into any water source.

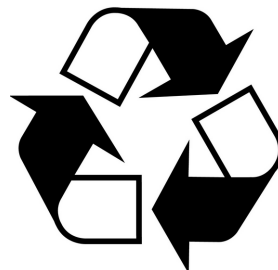

0.14 Use Proper Lifting Equipment

0.14.1 Lifting heavy components incorrectly can cause severe injury or Seed Control Unit damage.

Follow recommended procedure for removal and installation of components in the manual.

Ensure lifting equipment is rated for the job

Ensure operator is appropriately licensed to operate lifting equipment




0.15 Personal Protective Equipment (PPE)

0.15.1 A Qualified Person designated by the employer, who is knowledgeable about and familiar with all relevant specifications and assembly instructions and is capable of identifying existing or potential hazards in surroundings or working conditions which may be hazardous or dangerous to employees shall determine appropriate Personal Protective Equipment required for this assembly.

Personal Protective Equipment (PPE) are devices worn by the employees to protect against hazards in the environment. Examples include safety glasses, face shields, respirators, gloves, hard hats, steel-toe shoes, and hearing protection. Wear close fitting clothing and safety equipment appropriate for the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

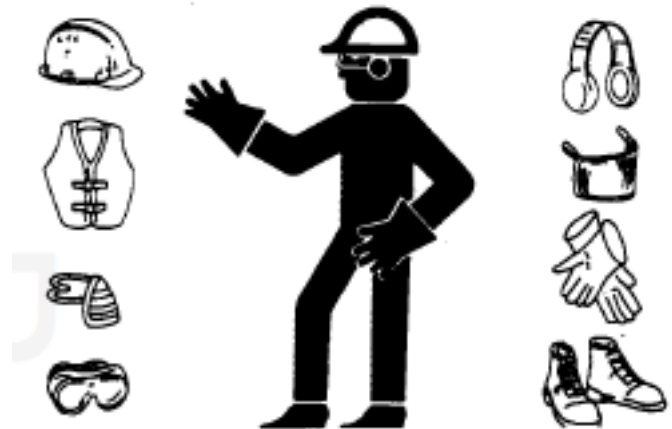

0.16 Sound Level

0.16.1 This product produces sound pressure levels in excess of 90 dB within 10m of discharge area.



Hearing protection is required!

Interference with speech communication, acoustic signals is possible.




0.17 Prepare for Emergencies

0.17.1 Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital and fire department near your telephone.

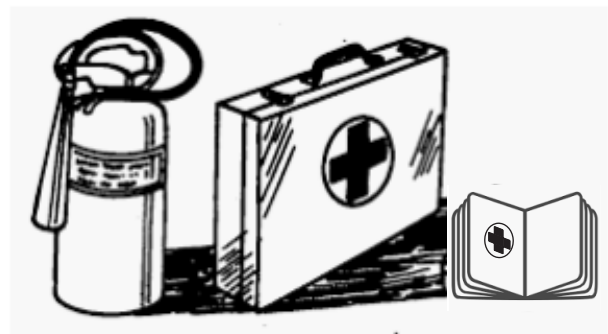


0.18 Fire Extinguisher

0.18.1 A 6 kg (15 lb) general-purpose fire extinguisher meeting national certification requirements must be installed on left side of operator's platform.

Maintain fire extinguisher to keep it in operating condition.

Make sure that the fire extinguisher is always ready for use. Refer to the fire extinguisher's manual for instructions on how to operate it. Once extinguisher is operated - no matter how long - it must be recharged.

Keep the engine clean and free of dust, chaff and straw to prevent the possibility of fire.

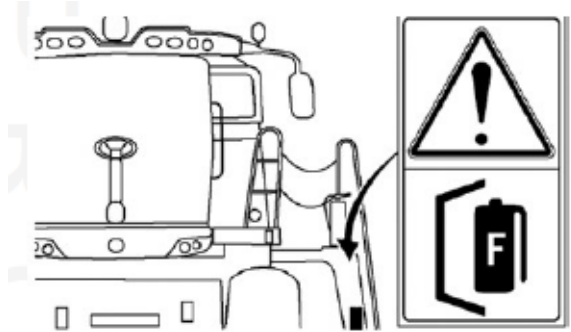

0.19 Remove Accumulated Crop Debris

0.19.1 The build up of chaff and crop debris in the engine compartment, on the engine, and near moving parts is a fire hazard. Check and clean these areas frequently.



0.20 In the Event of Fire

0.20.1 Stop work immediately at first sign of fire. This may be the smell of smoke or the sight of smoke or flames.



CAUTION: Do not risk personal injury. If a fire is too far advanced, do not try to extinguish it.

If a fire can be safely extinguished, proceed carefully and follow these guidelines:

1. Remove fire extinguisher from bracket and carry it to the area of fire.
2. Approach area of fire wind to your back.
3. Pull the safety pin out of actuating lever.
4. Hold extinguisher upright and aim hose at base of flames.
5. Squeeze lever to discharge fire extinguisher.
6. Move hose to cover the source of the fire evenly with extinguishing agent.



Torque Table		
Nominal Size	Class 8.8	Class 10.9
	Nm / (ft-lbs)	Nm / (ft-lbs)
M8 - flanged	27 / (20)	39 / (29)
- non flanged	25 / (18)	35 / (26)
M10 - flanged	54 / (40)	57 / (42)
- non flanged	49 / (36)	70 / (51)
M12 - flanged	93 / (69)	134 / (98)
- non flanged	85 / (63)	121 / (90)
M16 - flanged	231 / (171)	331 / (244)
- non flanged	210 / (155)	301 / (222)




Master Power


1. Shut off engine, remove keys from the combine cab
2. Block wheels on level ground
3. Turn Master Power Off

1 OEM Chopper (A) Removal from combine

- 1.1 Remove drive shield (B)**
- to be reused


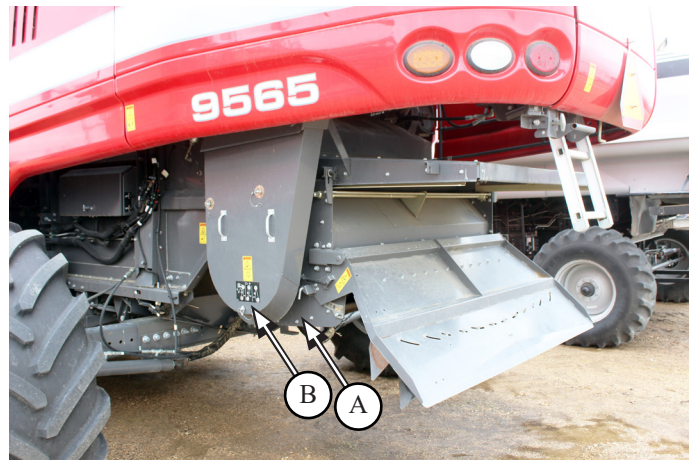


- 1.2 Disconnect and remove speed sensor (C)**
- to be reused

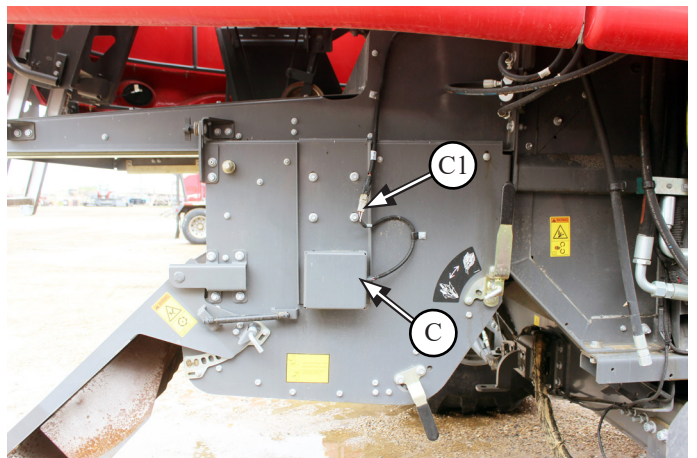

- 1.3 Remove hardware (D1) securing chopper in place**
- both sides
- to be reused

- 1.3.1 Remove brackets (D) from sidewall of chopper**
- both sides

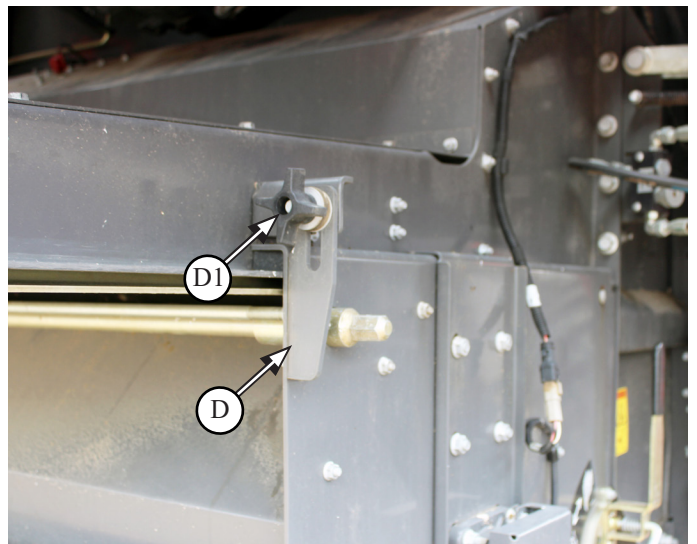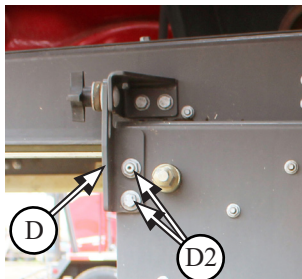


1.4 With a forklift, raise a pallet and secure the Chopper (**A**)



1.4 Slide chopper off of combine

1.5 Remove plastic sliders (**E**) from chopper (**A**)

- both sides
- to be installed on new chopper

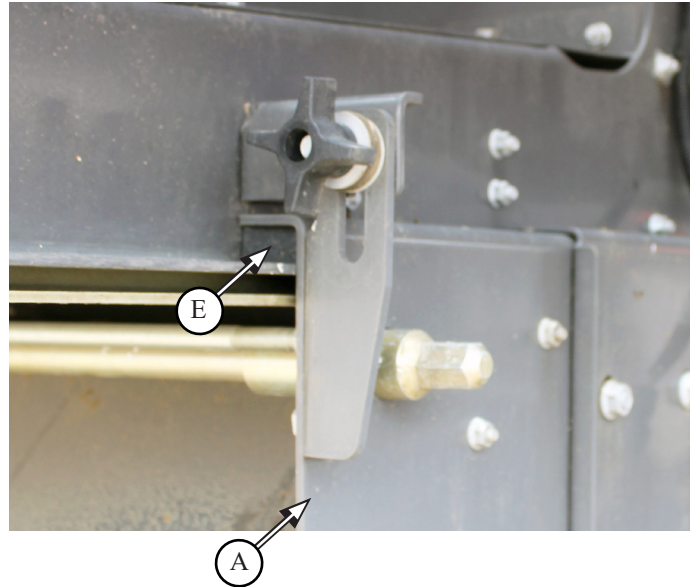


2 Chopper Installation



2.1 Plastic Sliders Installation

2.1.1 Install plastic sliders (**E**) from OEM chopper

- reuse hardware (**E1**) from 1.6
- both sides

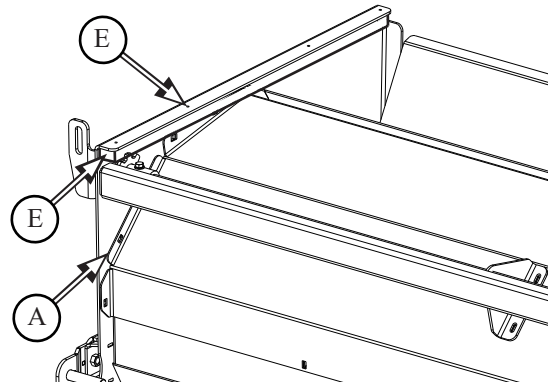


2.2 Chopper Installation


Parts List:

CA435CA Chopper MAV Agco Wide Body (A) Qty 1

2.2.1 With a forklift, raise the Chopper (A) and align the rails to the combine mounting flanges

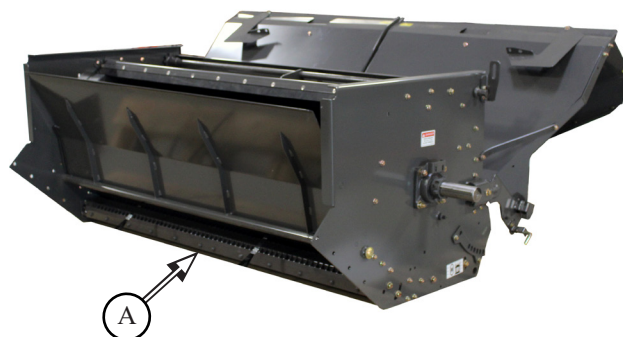

2.2.2 Secure chopper in place with hardware (D1)

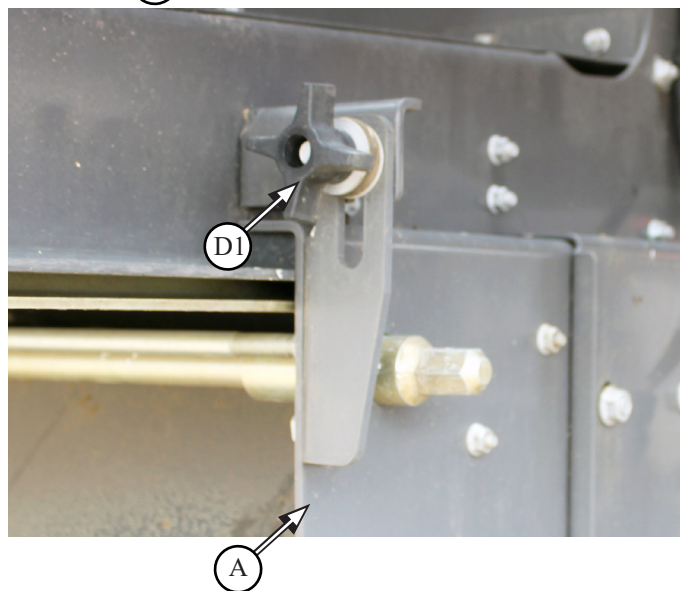

2.3 Drive Sheave Installation

Parts List:


RP129 Sheave 2B 8.6 SK (A)

Qty 1

RP291 Bushing 50mm SK (B)


Qty 1

323624 Key (C)

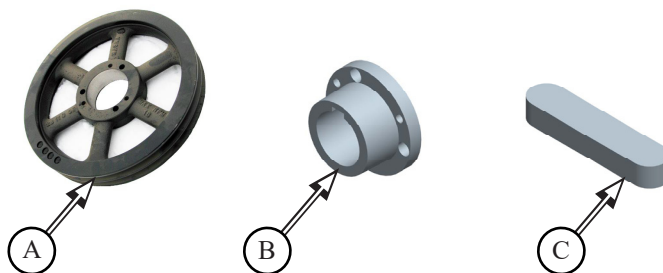

2.3.1 Install sheave (A), bushing (B) and key (C) onto rotor shaft (D)

- ensure sheave is aligned with sheave on combine

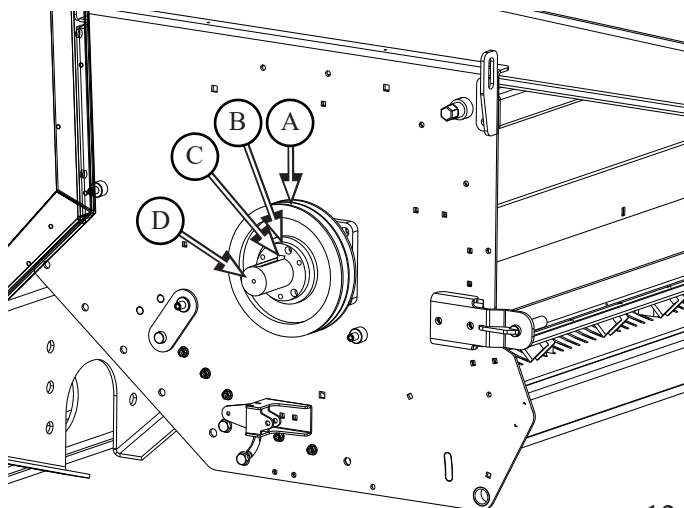


2.4 Gas Spring Installation

Parts List:


RP951A Gas Spring (A)

Qty 3

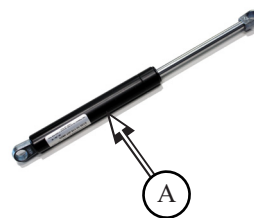


2.4.1 Install gas spring (A) from pin (B) on chopper side wall to pin (C) on tailboard, with
- M8 x 16 flange head bolt (A1) x2

2.4.1.1 Repeat for other side

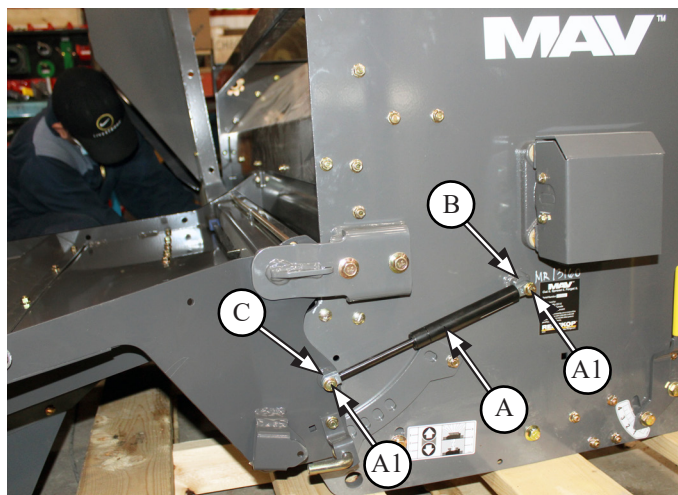

2.4.2 Install gas spring (A) from pin (D) on chopper side wall to door linkage (E), with
- M8 x 16 flange head bolt (A1) x2

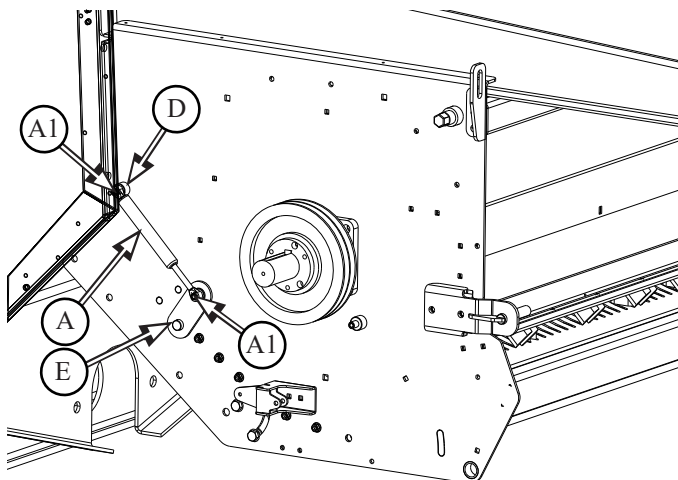


2.5 Shield Mount Brackets Installation

Parts List:



CA452CA Shield Mount Bracket **(A)**

Qty 3

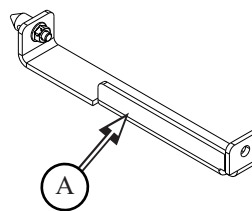


2.5.1 Install shield mount brackets **(A)** x3 into existing holes in side of chopper wall, with

- M10 x 20 round head bolt and flange nut **(A1)** x3
- ensure head of bolt is on inside of chopper

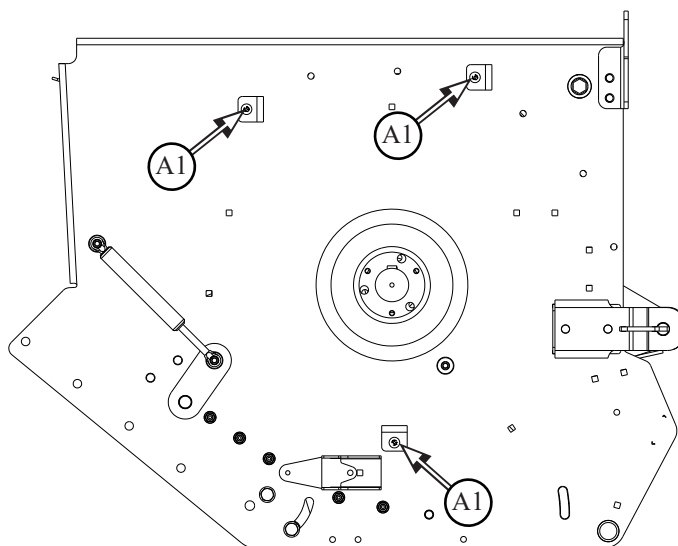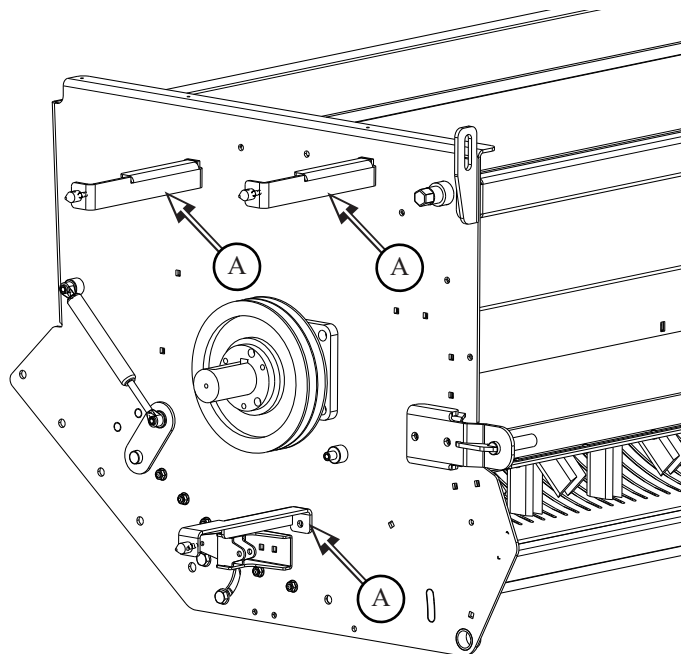

- 2.6** Install speed sensor (**C**) over speed sensor target
- connect back to harness (**C1**)

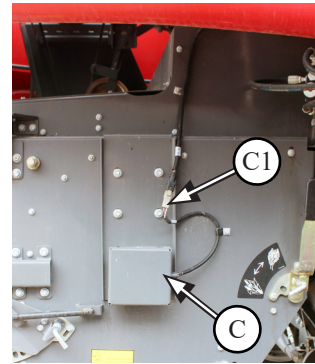

- 2.7** Install drive belt (**D**)

- 2.8** Install drive shield (**B**)



Torque Table		
Nominal Size	Class 8.8	Class 10.9
	Nm / (ft-lbs)	Nm / (ft-lbs)
M8 - flanged	27 / (20)	39 / (29)
- non flanged	25 / (18)	35 / (26)
M10 - flanged	54 / (40)	57 / (42)
- non flanged	49 / (36)	70 / (51)
M12 - flanged	93 / (69)	134 / (98)
- non flanged	85 / (63)	121 / (90)
M16 - flanged	231 / (171)	331 / (244)
- non flanged	210 / (155)	301 / (222)

