


REDEKOP™

MAV HOUSING UPGRADE JOHN DEERE S-SERIES

INSTALLATION MANUAL

PRODUCT NUMBER: 340-105WC

REDEKOP™

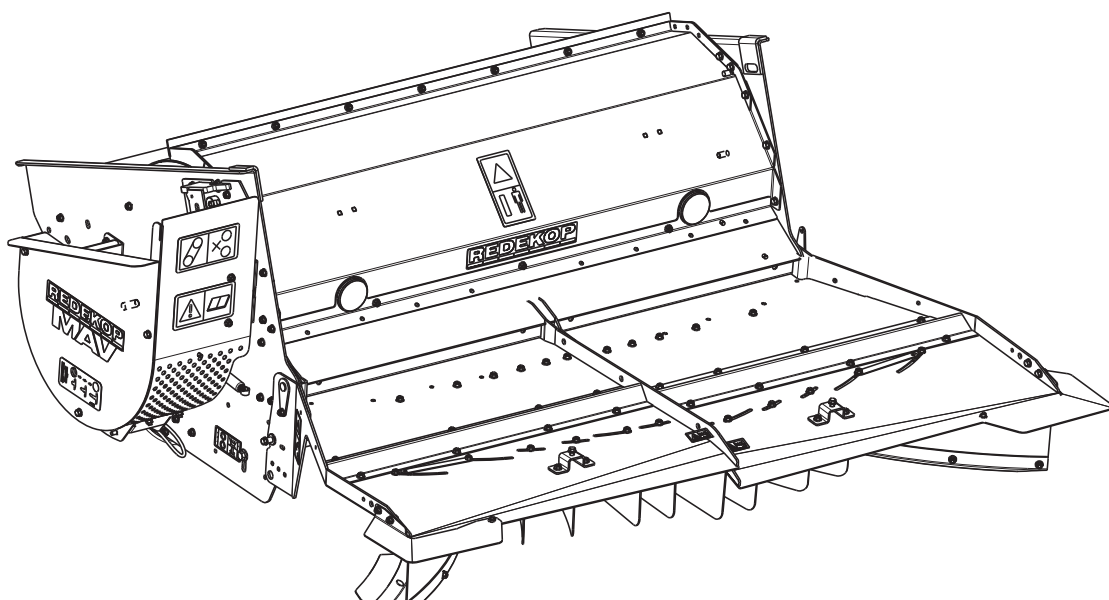

Housing Upgrade MAV JD S Series Installation Manual

Table of Contents

	<u>Section</u>
Safety	0
Removal of Factory Chopper (if applicable)	1
Housing Upgrade Installation	2
Configure Cab Monitor Software	3

0 Safety

0.1 Introduction

0.1.1 IMPORTANT: Read through this instruction thoroughly and familiarize yourself with the machine before removing these components. Do not skip steps or perform them out of order.

This instruction manual explains the proper procedure for preparing the combine and removing the Factory Spreader Components in order to install the Redekop MAV Chopper



0.2 Recognize Safety Information

0.2.1 This is a safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



0.3 Understand Signal Words

0.3.1 A signal word - DANGER, WARNING, or CAUTION - is used with the safety-alert symbol. DANGER identifies the most serious hazards.

WARNING or CAUTION safety signs are located near specific hazards or precautionary areas in this manual.



0.4 Follow Safety Instructions

0.4.1 Carefully read all safety messages in this manual and on your machine. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your dealer.

There can be additional safety information contained on parts and components sourced from suppliers that is not reproduced in this operator's manual.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your dealer.

Other languages are available for this machine. Please contact Redekop



0.5 Safe Operating Practices

0.5.1 DO NOT stand near the straw chopper when combine is running.

ALWAYS refer to your Combine Operator's Manual, and review the Safety section before operating machine. The Combine Operator's Manual details safe operating practices that must be followed to protect you and others from accidental injury and/or death.

Operate Straw Chopper only when all guards are correctly installed.

Before moving away, always check immediate vicinity of Straw Chopper (e.g. for children). Ensure adequate visibility. Use a horn as a warning immediately before moving away.

When making turns, always take into consideration the width of the attachment and the fact that the rear end of the machine swings out. Attachments and ground conditions affect the driving characteristics.

Never leave combine unattended as long as engine is running.



0.6 Work In Ventilated Area

0.6.1 Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.




0.7 Remove Key from Ignition

0.7.1 ALWAYS shut off combine engine prior to working on it.

Apply park brake, remove key and lock operators cab.

If the combine is equipped with an additional safety master power switch, turn this to the Power OFF position.

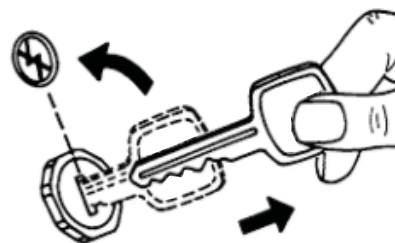

0.8 Block Wheels

0.8.1 Park the combine on level ground.

Always engage the park brake and block the combine wheels prior to working to prevent the combine from moving.



0.9 Practice Safe Maintenance

0.9.1 Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust Straw Chopper while it is moving. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Keep hands, feet and clothing away from power-driven parts. Tie long hair behind your head. Do not wear rings, jewelry, a necklace, a necktie, scarf, or loose clothing when you work near machine or moving parts. If these items were to get caught, severe injury could result.

Securely support any Straw Chopper elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

On self-propelled equipment, disconnect battery ground cable (-) before making adjustments on electrical systems or welding on Straw Chopper.



0.10 Guards and Shields

0.10.1 Keep guards and shields in place at all times. Ensure that they are serviceable and maintained correctly.



0.11 Avoid Contact With Moving Parts

0.11.1 Keep hands, feet and clothing away from power driven parts. Never clean, lubricate or adjust machine when it is running.

Never attempt to clear obstructions from machine unless it is disengaged, engine shut off and key removed.



0.12 Avoid High-Pressure Fluids

0.12.1 Inspect hydraulic hoses periodically - at least once per year - for leakage, kinking, cuts, cracks, abrasion, blisters, corrosion, exposed wire brand or any other signs of wear or damage.

Replace worn or damaged hose assemblies immediately.

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high-pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source.



0.13 Dispose of Waste Properly

0.13.1 Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste includes such items as oil, fuel, coolant, brake fluid, filters and batteries.

Use appropriate tools and personal protective equipment such as clothing, gloves, face shields or glasses, during the removal or handling of objects and materials.

Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

Do not pour waste onto the ground, down a drain, or into any water source.



0.14 Use Proper Lifting Equipment

0.14.1 Lifting heavy components incorrectly can cause severe injury or Straw Chopper damage.

Follow recommended procedure for removal and installation of components in the manual.

Ensure lifting equipment is rated for the job

Ensure operator is appropriately licensed to operate lifting equipment




0.15 Personal Protective Equipment (PPE)

0.15.1 A Qualified Person designated by the employer, who is knowledgeable about and familiar with all relevant specifications and assembly instructions and is capable of identifying existing or potential hazards in surroundings or working conditions which may be hazardous or dangerous to employees shall determine appropriate Personal Protective Equipment required for this assembly.

Personal Protective Equipment (PPE) are devices worn by the employees to protect against hazards in the environment. Examples include safety glasses, face shields, respirators, gloves, hard hats, steel-toe shoes, and hearing protection. Wear close fitting clothing and safety equipment appropriate for the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

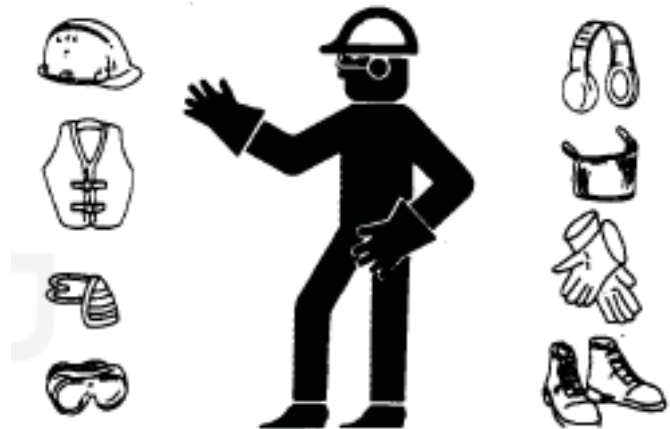

0.16 Sound Level

0.16.1 This product produces sound pressure levels in excess of 90 dB within 10m of discharge area.



Hearing protection is required!

Interference with speech communication, acoustic signals is possible.




0.17 Prepare for Emergencies

0.17.1 Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital and fire department near your telephone.

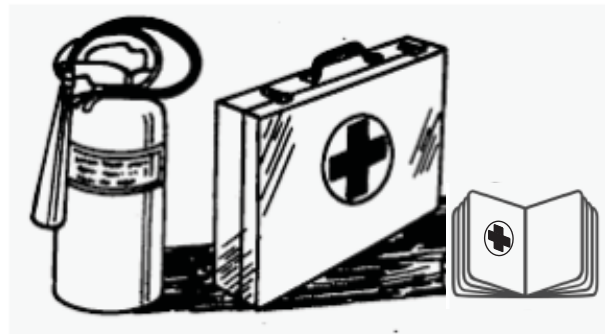


0.18 Fire Extinguisher

0.18.1 A 6 kg (15 lb) general-purpose fire extinguisher meeting national certification requirements must be installed on left side of operator's platform.

Maintain fire extinguisher to keep it in operating condition.

Make sure that the fire extinguisher is always ready for use. Refer to the fire extinguisher's manual for instructions on how to operate it. Once extinguisher is operated - no matter how long - it must be recharged.

Keep the engine clean and free of dust, chaff and straw to prevent the possibility of fire.

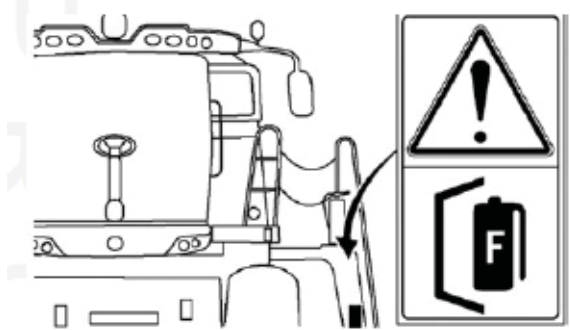

0.19 Remove Accumulated Crop Debris

0.19.1 The build up of chaff and crop debris in the engine compartment, on the engine, and near moving parts is a fire hazard. Check and clean these areas frequently.



0.20 In the Event of Fire

0.20.1 Stop work immediately at first sign of fire. This may be the smell of smoke or the sight of smoke or flames.



CAUTION: Do not risk personal injury. If a fire is too far advanced, do not try to extinguish it.



If a fire can be safely extinguished, proceed carefully and follow these guidelines:

1. Remove fire extinguisher from bracket and carry it to the area of fire.
2. Approach area of fire wind to your back.
3. Pull the safety pin out of actuating lever.
4. Hold extinguisher upright and aim hose at base of flames.
5. Squeeze lever to discharge fire extinguisher.
6. Move hose to cover the source of the fire evenly with extinguishing agent.

Torque Table		
Nominal Size	Class 8.8	Class 10.9
	Nm / (ft-lbs)	Nm / (ft-lbs)
M8 - flanged	27 / (20)	39 / (29)
- non flanged	25 / (18)	35 / (26)
M10 - flanged	54 / (40)	57 / (42)
- non flanged	49 / (36)	70 / (51)
M12 - flanged	93 / (69)	134 / (98)
- non flanged	85 / (63)	121 / (90)
M16 - flanged	231 / (171)	331 / (244)
- non flanged	210 / (155)	301 / (222)



CAUTION

Check all fasteners to ensure they have been properly tightened

0.15 Safety Decals

Hand Injury / Rotate Danger
RP871



Projectile Hazard / Stand Clear
RP872



Caution / Check Service Manual
RP873



Keep Hands out of Belt Area
RP874



High Pressure Fluid Hazard / Check Service Manual
RP876




Pinch Point Hazard
84394351



0.16 Information Decals


Windrow Floor Adjustment
Wide Spread / No Spread
RP896

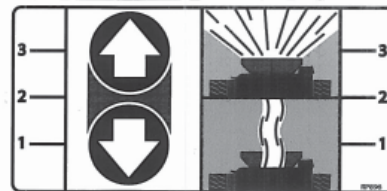

Redekop Straw Chopper Serial Number Plate
RP246




Knifebar Adjustment
RP942

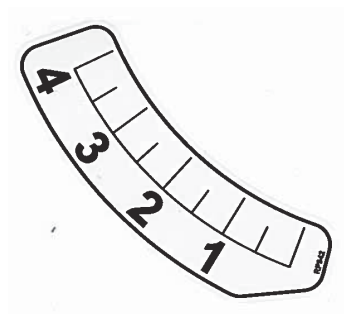

0.16 Serial Number

1. Rotor serial number (A):

- stamped on the rotor, located on the drive end

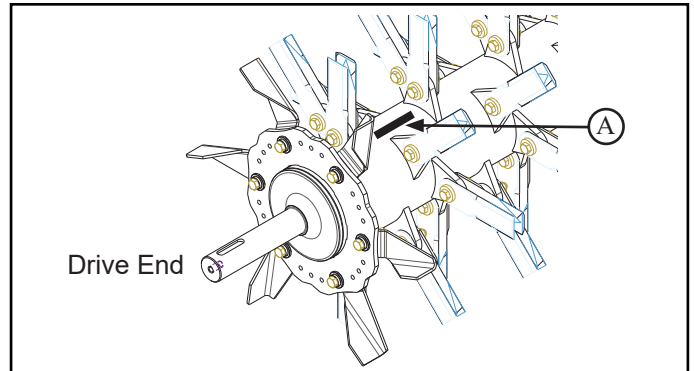

2. Straw chopper serial number plate (B):

- located on the chopper wall, non-drive side, below the rotor shaft shield



1 OEM Chopper Preparation



This kit is designed to update the factory straw chopper with vane tailboard. If your straw chopper is equipped with a power spreader tailboard, additional parts are required to convert to vane tailboard. Order as required from your John Deere dealer.

The below instructions and pictures are for a S700 with an advanced power cast tailboard. If your system is different than shown, follow the procedure although the parts may have slight variations.

1.1 Remove bottom shields (A1 and A2)



If combine is equipped with the hydraulic power spreader tailboard , the tailboard will be removed, but the hydraulics can remain on the combine or be removed.

- see section 1.2 to leave the hydraulics on the combine


- see section 1.3 to remove the hyd pump, hyd block and hyd lines to the spreader

The below instructions and pictures are for a S700 with an advanced power cast tailboard. If your system is different than shown, follow the procedure although the parts may have slight variations.

1.2 Procedure to leave Hydraulics on combine

Parts List:


H38-1010FFX	Fit Hyd 90deg		
	10 MORF - 10 FORFX Swivel (B)	Qty 1	
HH122	Hose Hyd .5 x 24L		
	8 FORFSX90 - 10 FORFSX (C)	Qty 1	
HH123	Hose Hyd .5 x 24L		
	8 FORFSX - 10 FORFSX (D)	Qty 1	

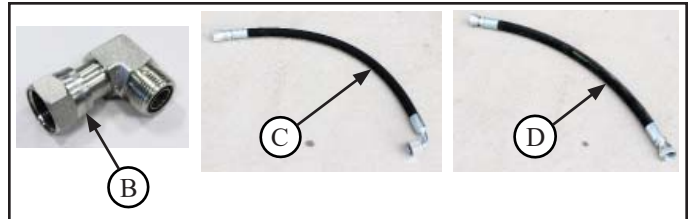

1.2.1 Use vacuum pump D15032NU on resevoir fill spout which will allow removal of hydraulic components without draining the reservoir.

1.2.2 Remove power spreader hydraulic lines (G1 & G2) from front of hydraulic block (F) - place onto top of spreader


1.2.3 Remove power spreader hydraulic lines (G3 & G4) from side of hydraulic block (F) - place onto top of spreader

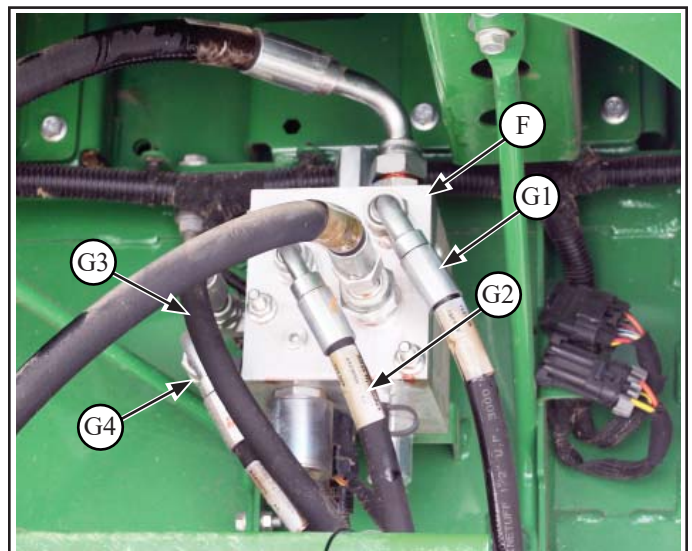

1.2.4 Install hydraulic fitting (B) into front hydraulic block port (F1)

1.2.5 Install hydraulic line (C) into fitting (B) and into front hydraulic block port (F2) creating a loop


1.2.6 Install hydraulic line (D) into side hydraulic block ports (F3 & F4) creating a loop

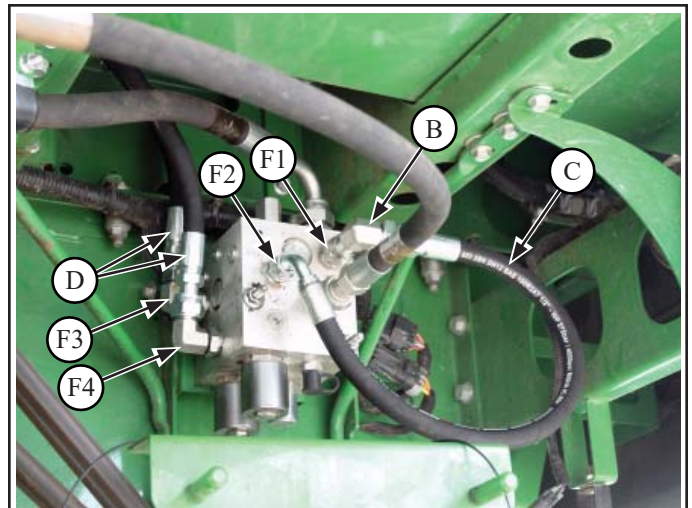


1.3 Procedure to remove pump (M), hydraulic block (S) and lines to spreader motors from combine if equipped with hydraulic power spreader

Parts List:

- H14-20F Fit Hyd Cap 20 FORS (H) Qty 1
- H14-16F Fit Hyd Cap 16 FORS (J) Qty 1
- H14-12F Fit Hyd Cap 12 FORS (K) Qty 1

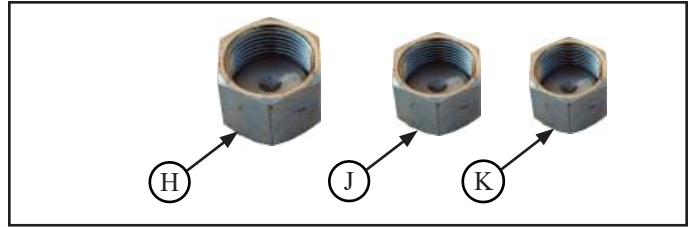


1.3.1 Remove shield (L) from brackets (L1) around hydraulic pump (M)

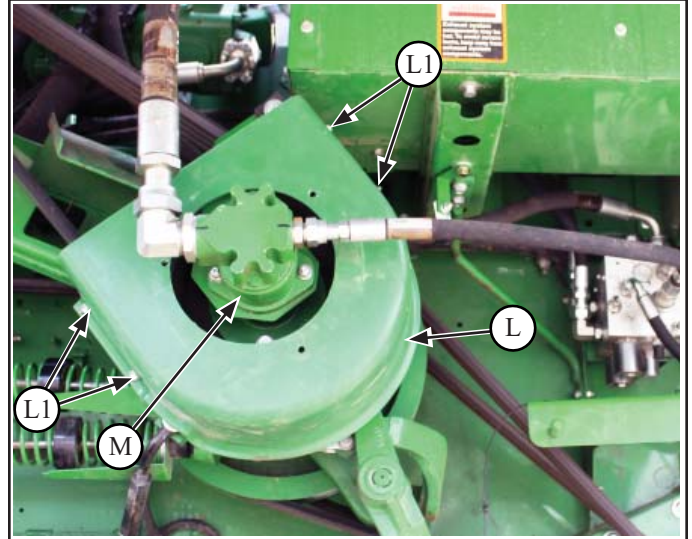


1.3.2 Through opening in shield around pump, remove hydraulic pump (M) from sheave (N)

- disconnect plate (M2) from bracket
- disconnect pump (M1) from sheave (N)
- tie up pump, shield and hoses in order to work on sheave

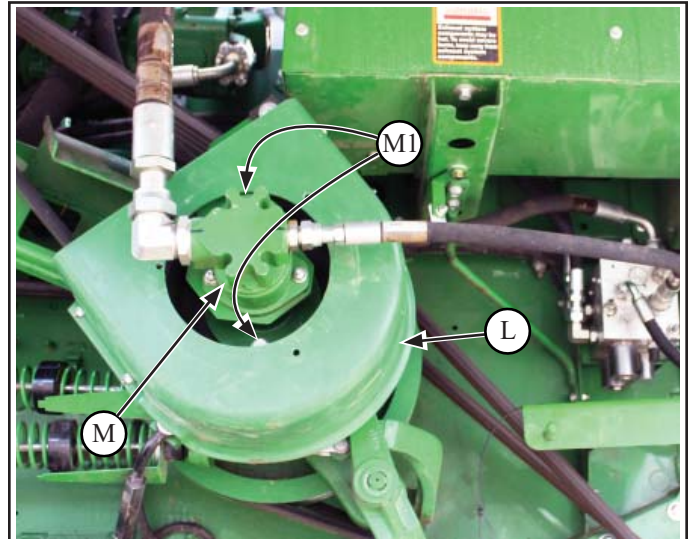

View with shield and hose removed for reference of hardware and brackets behind shield

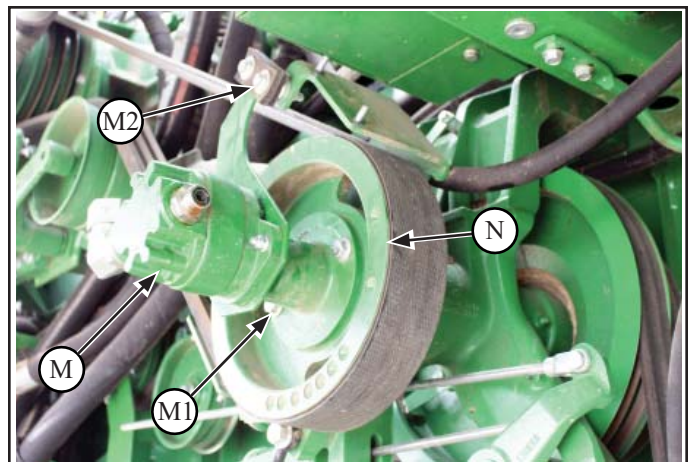

1.3.3 Drain oil from resevoir (**P**) (approx. 15 gals) or use vacuum pump D15032NU on resevoir fill spout which will allow removal of hydraulic components without draining the resevoir

1.3.4 Disconnect hydraulic lines from resevoir (**H1**) and line (**J1**)

1.3.5 Install hydraulic cap (**J**) or (**K**) onto resevoir port

1.3.6 Install hydraulic cap (**H**) onto resevoir port




1.3.7 Remove hydraulic pump (**M**) and disconnect hydraulic hoses to hydraulic block (**S**)

1.3.8 Remove hydraulic block (**S**)


1.3.9 The pump (**M**) and hydraulic block (**S**) are not to be reused with the MAV chopper and can be stored

1.4 Remove wire harness (**T**) connected to the hydraulic block and spreader from the spreader and arms. Keep harness connected to hydraulic block.

1.4.1 Tie up harness (**T**)

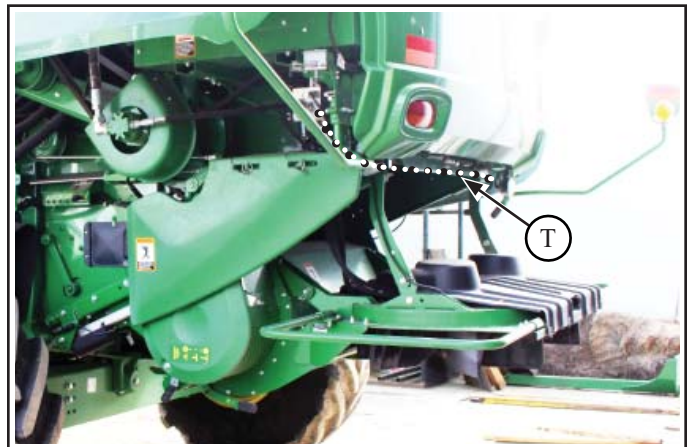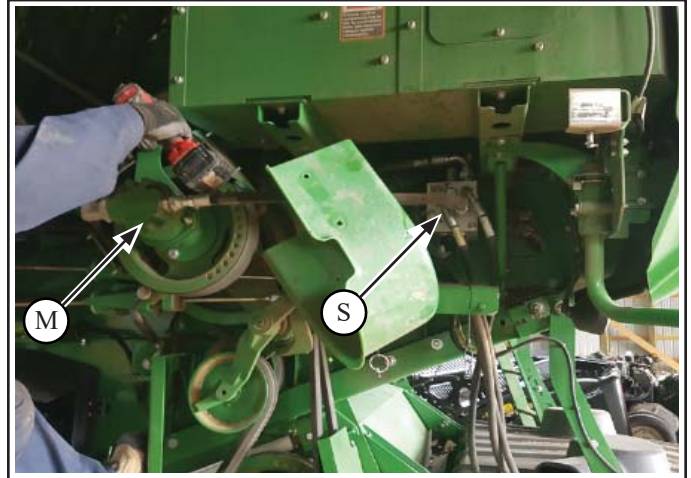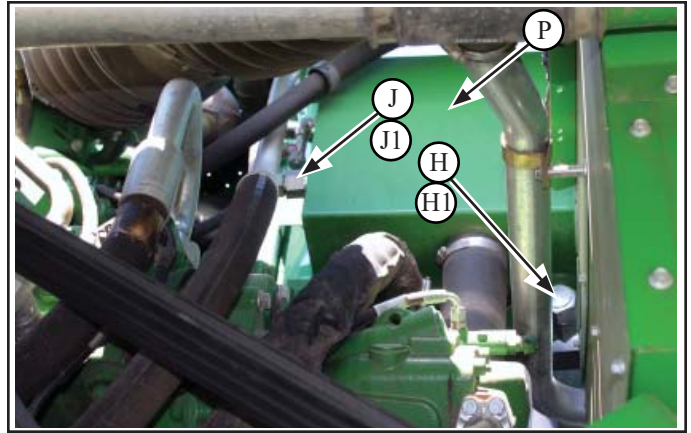

1.5 Remove factory chopper and components (A)

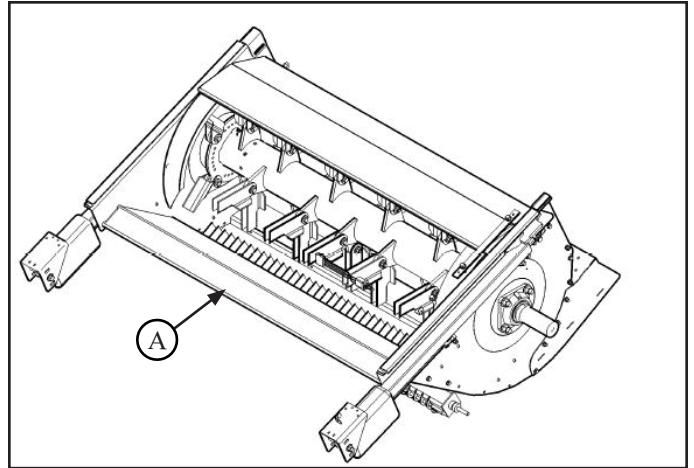


1.5.1 Move chopper (A) into upper position (windrow mode) with actuators all the way out



Ensure chopper is securely supported

1.5.2 Position a pallet underneath chopper with a forklift to hold the weight. It may be necessary to remove the tailboard first by pulling pins at (B) and (C)

1.5.3 With chopper supported, actuator pins (D) can be removed and the actuators stroked back in

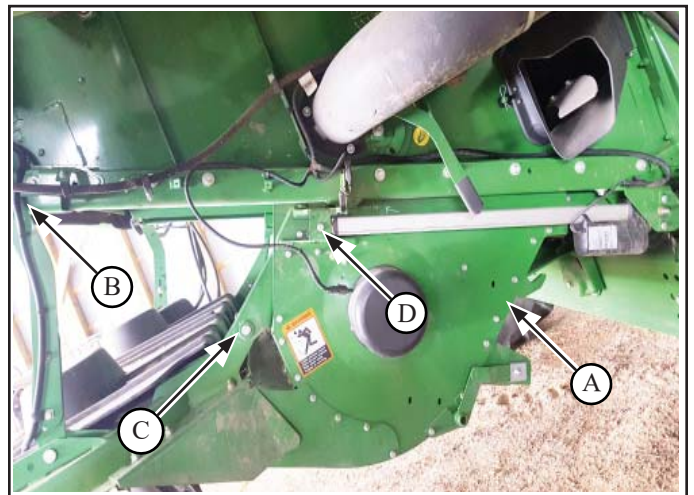


1.5.4 Remove or unplug all hydraulic and electrical clips and wires (E1) secured to the rail (E) or chopper.

1.5.5 Remove the John Deere chopper speed sensor and target from under cover (F)
- to be reinstalled onto the Redekop chopper

1.5.6 Remove all hardware (E2) securing rails (E) to combine. The rails can then be removed with the actuator still mounted to the rail

1.5.7 Chopper (A) can now be removed and stored

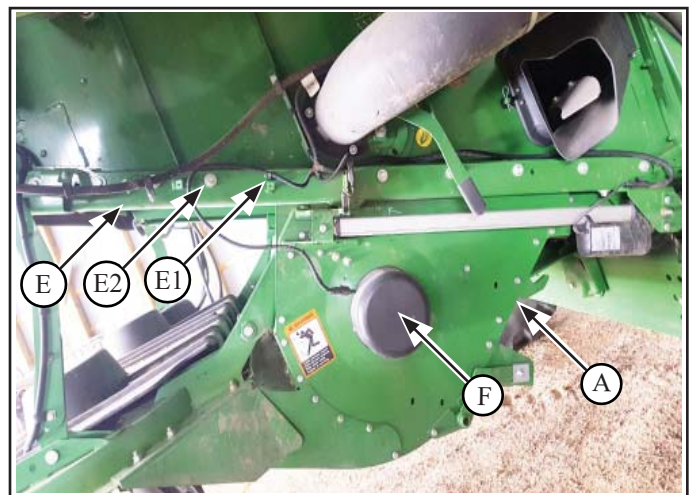


2 S Series MAV Chopper Housing Installation

2.1 Drive Installation - On combines with the OEM Fine Cut Chopper (FC)

For combines with the OEM Xtra Fine Cut Chopper (XFC), no drive update is required. Skip section 2.1

Parts List:

RP967	Sheave 4HC S Series Upper Drv	(A)	Qty 1
BE4C127K	V Belt 4C 127L Kevlar	(B)	Qty 1
RP968	2HC S Series HS Chopper Drive	(D)	Qty 1
BE2C112K	V Belt 2C 112L Kevlar	(T)	Qty 1

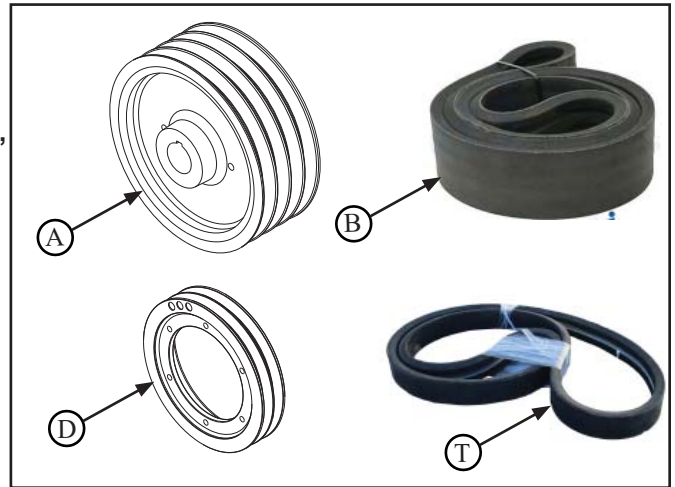

2.1.1 Remove existing 3 groove Deere sheave and drive belt from upper jackshaft

2.1.2 Install new RP967 4 groove sheave (A) onto jackshaft with:


- reuse existing nut and washer hardware (A1)



Torque Nut to 308 N-m (225 lb-ft)

2.1.3 Install new 4 groove V drive belt (B)

Note: on S670 and S660 combines, the OEM upper drive is a 3 groove sheave - cut one groove off of the 4 groove belt for these combines

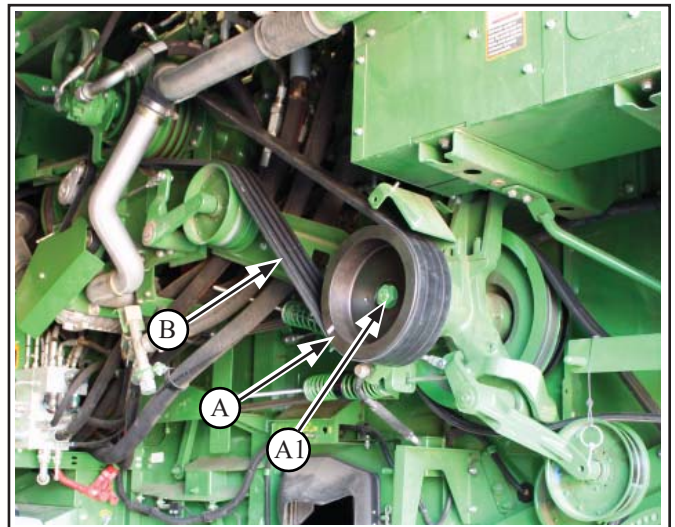

2.1.4 Remove Deere dual speed chopper sheave (C) from factory chopper

- sheave and hardware to be reinstalled on new chopper


2.1.5 Reinstall Deere dual speed chopper sheave (C) onto new chopper drive shaft with:

- reuse existing flat washer and bolt hardware (C1)



Torque Bolt to 308 N-m (225 lb-ft)

2.1.6 Remove Deere outside sheave (C2) - hardware (C3) x6, to be reused

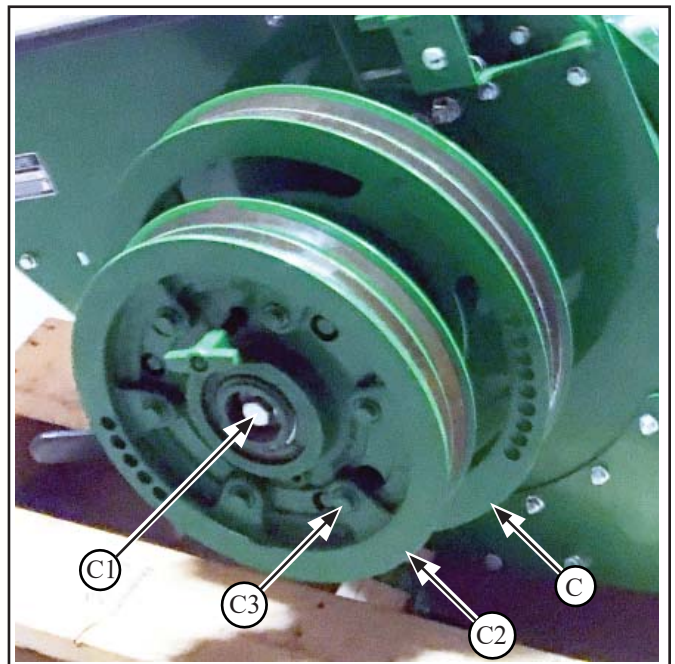


2.1.7 Install new RP968 sheave (**D**) in place of the outside sheave just removed with:
 - reuse existing hardware M10x35 flange bolt (**D1**) x6



2.2 S Series MAV Chopper Housing Installation

Parts List:

- | | | |
|----------|--|-------|
| CD620GA | S Series Housing Upgrade Assy (A) | Qty 1 |
| CD636-01 | S Series Slider (B) | Qty 2 |

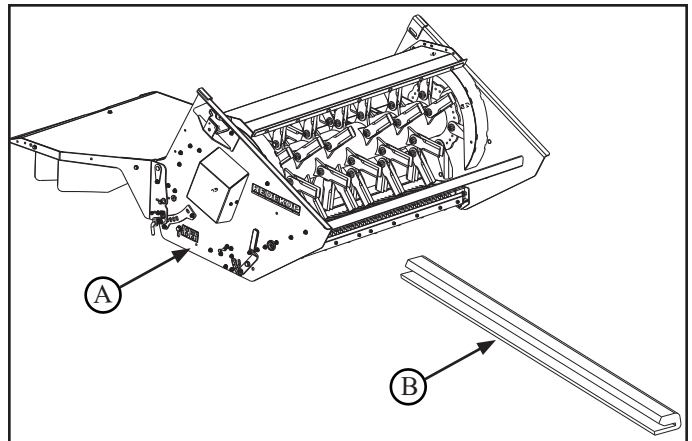


If short forks only available on the forklift for lifting, the tailboards may need to be removed for the housing installation

2.2.1 Install plastic guide (**B**) onto chopper lip (**A1**)
 - both sides
 - thicker portion to be on top of lip



2.2.2 Lift chopper (A) up to bottom side of combine (C). Raise chopper until the plastic guides (B) are flush with underside of combine sidesheets - both sides

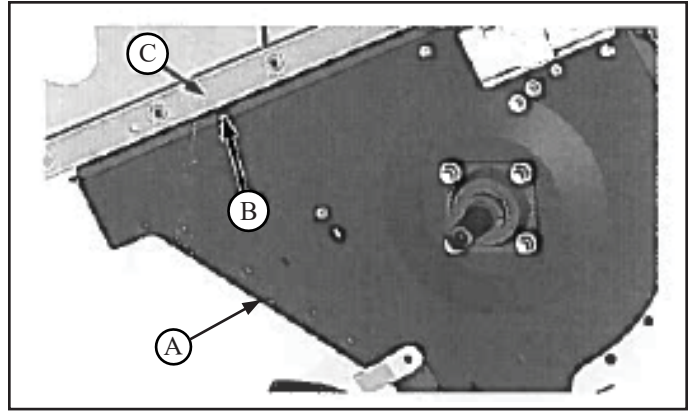


2.2.3 Reinstall Deere slide rail (F) under the plastic guide (B) and channel of combine bottom panel. Ensure the spacer plate (G) is between slide rail and combine channel.




Important to install side rail hardware as directed below

Fasten with existing flatwashers and bolt hardware in the following order:

- F1 hand tighten
- F2 tighten to specification - ensure rail is pulled tight against frame 
- F3 hand tighten
- Verify that the chopper rail is flush to the side sheet
- Tighten all hardware to specification

Repeat on other side

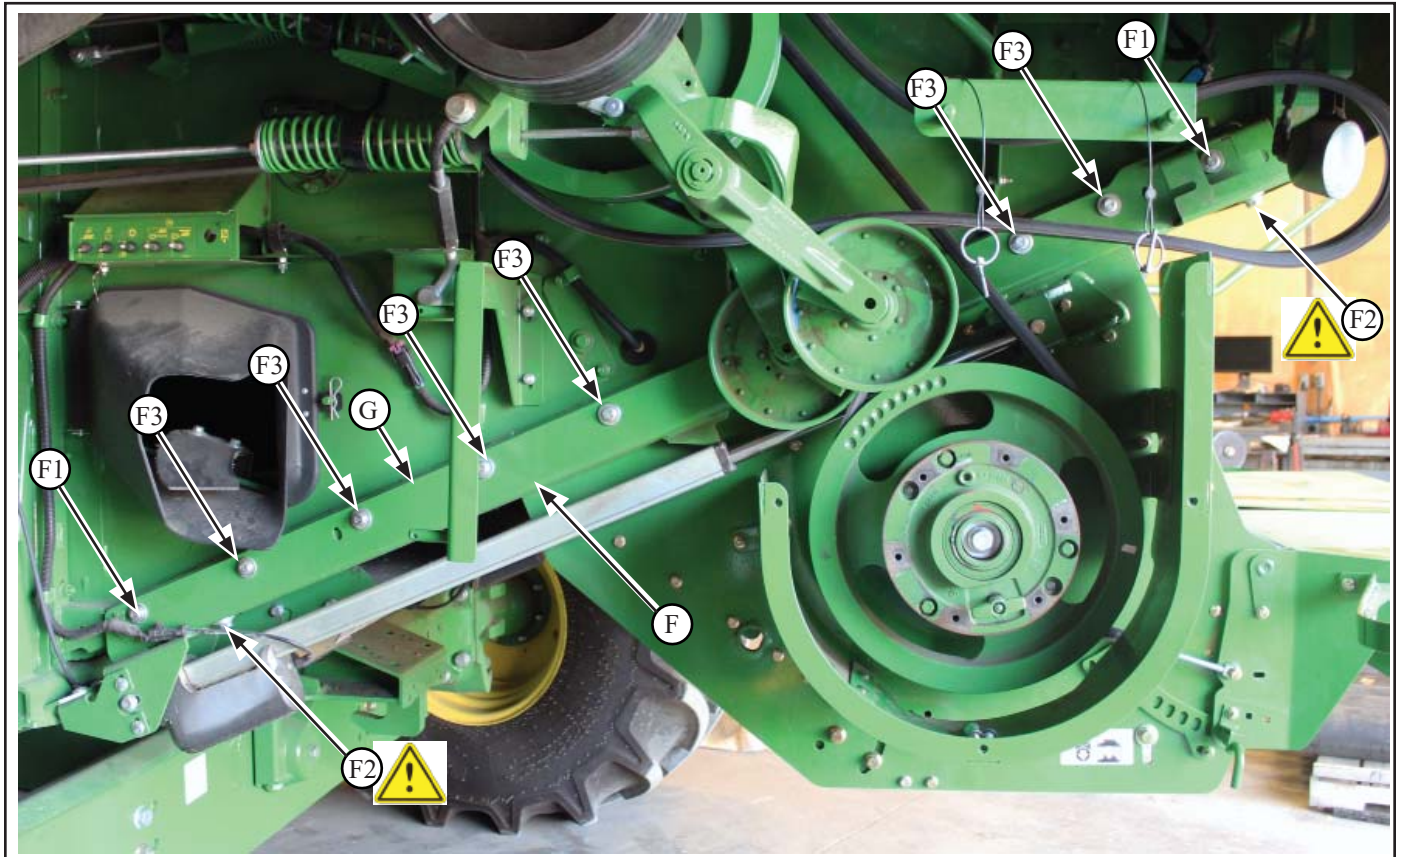



2.3 Actuator installation

Parts List:

CD664Z Spacer .5 IDx1.0 ODx.313 L **(H4)** x1



2.3.1 Attach head of linear actuator **(H)** to chopper housing **(A)** with:

- M12 x 60 flange head bolt **(H1)**
- CD664Z Spacer **(H4)** x1

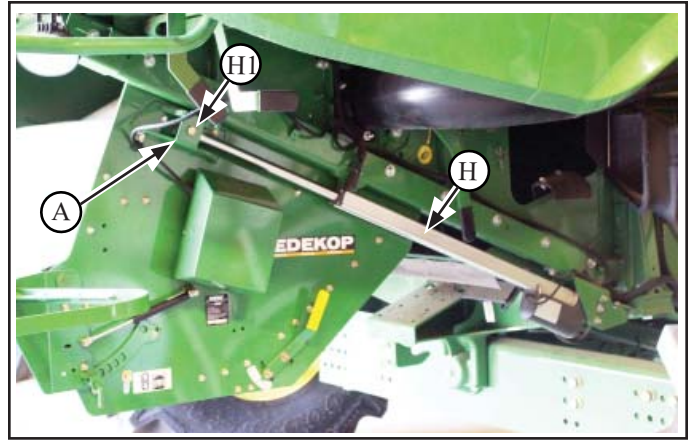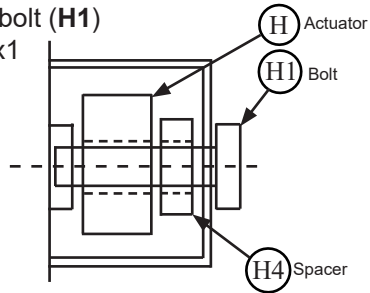

2.3.2 Attach bottom of linear actuator **(H)** to middle hole of slide rail bracket **(F)** with existing hardware:


- M12 x 120 flange bolt, flange nut and spacers **(H2)** x2

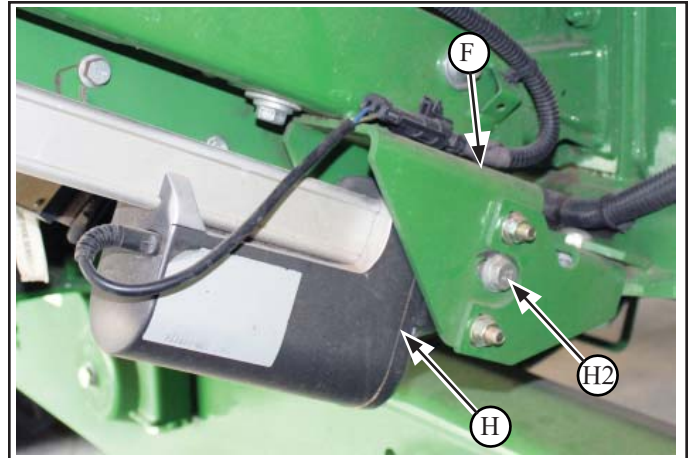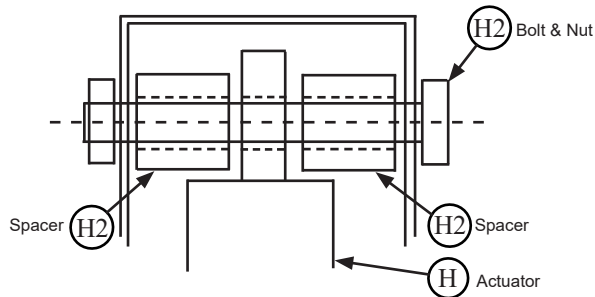


2.3.3 Install rail mount bracket **(J)** to slide rail bracket **(F)** with existing hardware:


- M10 x 25 round head bolt and flange nut **(J1)** x4
- M12 x 30 round head bolt and flange nut **(J2)** x2


2.3.3.1 Reconnect actuator harness **(H3)** to main harness

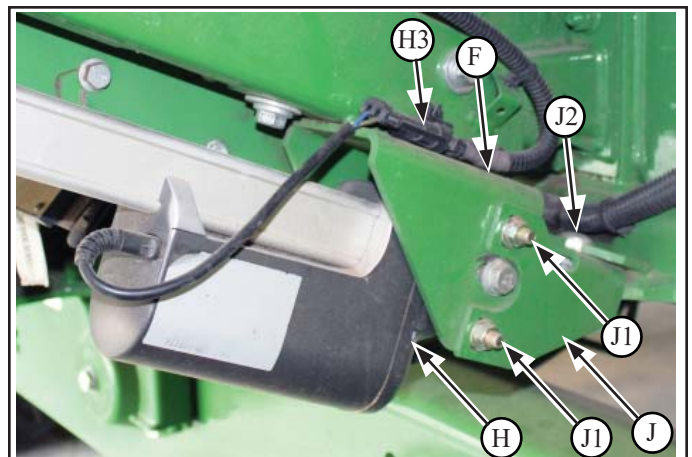

2.3.4 Reinstall sensor **(K)** on the right hand chopper rail with existing hardware:
- M4x18 screws and nuts **(K1)** x2

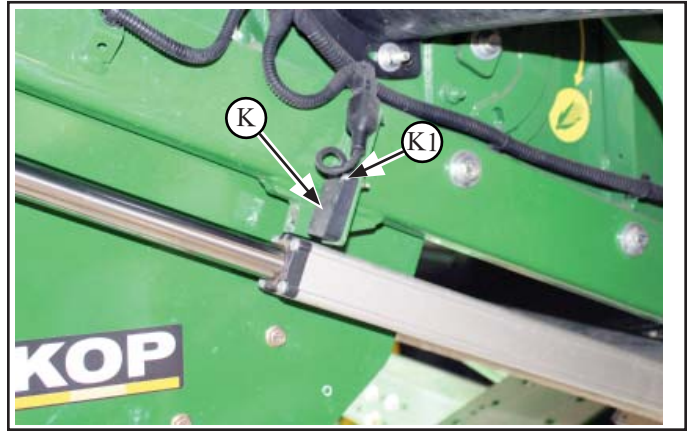


2.3.5  Synchronize up the actuators **(H)** by fully extending the actuators **(H)** to run the chopper all the way up/rearward
- do not move chopper forward before synching up actuators
- ensure inside of rails is clear of chaff and debris

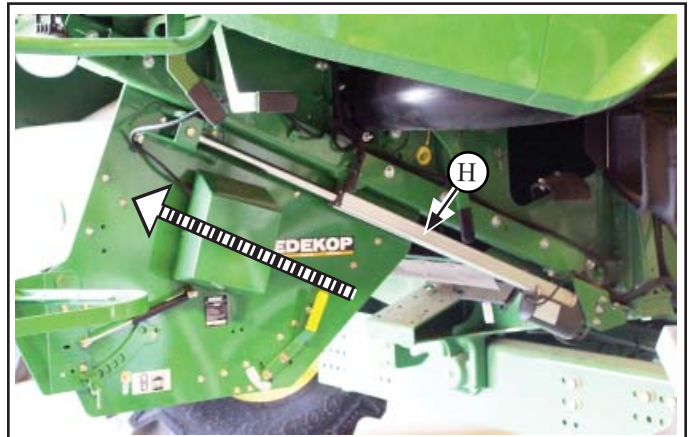


2.4 Speed sensor and target installation


2.4.1 Remove sensor shield (N) on right side of chopper housing
- to be reinstalled

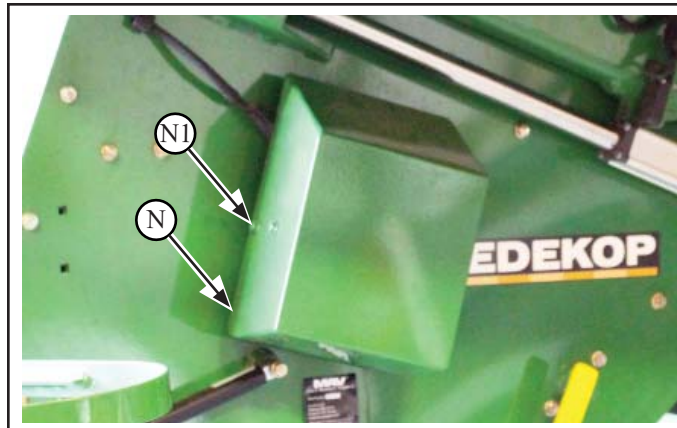


2.4.2 Reinstall speed sensor target (L) on the right hand chopper shaft with existing hardware:
- setscrew (L1)

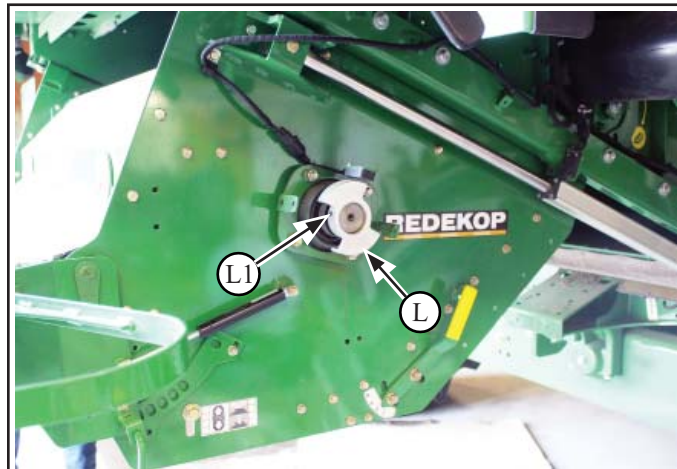

2.4.3 Reinstall sensor (M) over the speed sensor target (L) with existing hardware:
- M4x18 screws and nuts (M1) x2

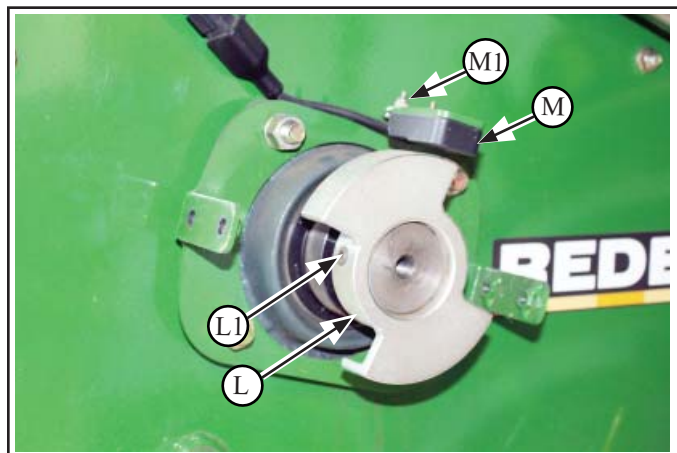


2.4.4 Reinstall sensor shield (N) on the right hand chopper shaft with:
- M6x16 flange bolts (N1) x4

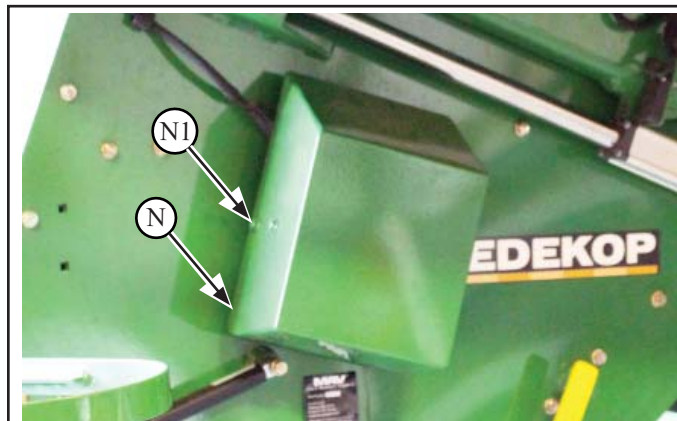

2.5 Gas spring and tailboard guard installation


2.5.1 Install gas spring (**P**) onto side of chopper housing and tailboard studs with:

- M8x16 flange bolts (**P1**) x2
- both sides

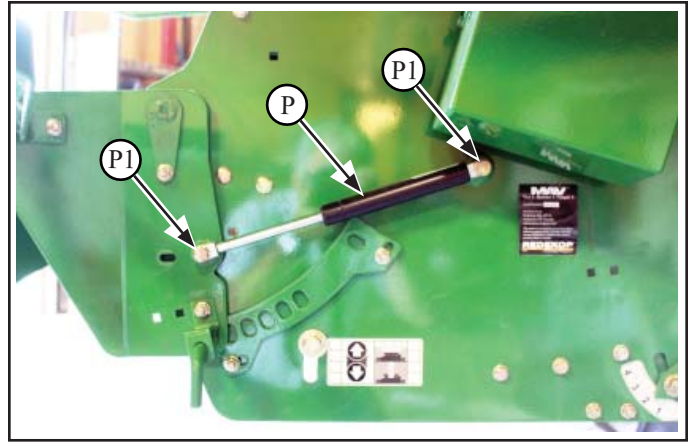

2.5.2 Install tailboard guard (**R**) onto side of tailboard with:

- M8x20 flange bolts and flange nuts (**R1**) x2
- ensure round head of bolt is on inside of tailboard
- both sides

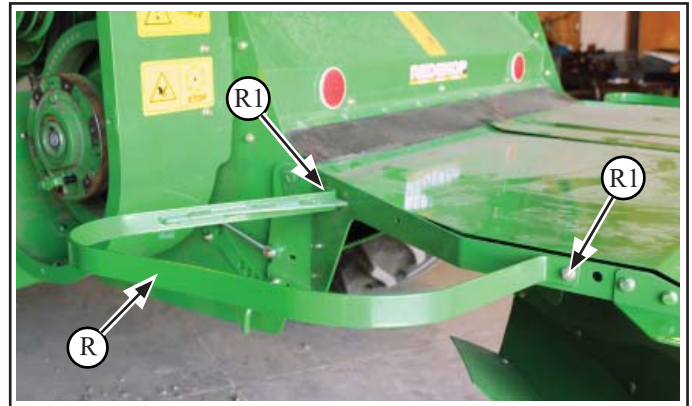

2.6 Drive Belt Installation

All belts must be placed on Jackshaft before installing to chopper sheaves.

1st - BE2C112K (**T**) onto large Jackshaft sheave

2nd - Beater Belt (**S1**) onto middle sheave


3rd - Existing low speed belt (**S**) on sheave closest to wall

2.6.1 Reinstall existing low speed drive belt (**S**) onto large drive sheave on chopper

2.6.2 Reinstall beater drive belt (**S1**) from jackshaft up to beater

2.6.3 Install new high speed 2 groove BE2C112K V drive belt (**T**) onto small drive sheave on chopper

2.6.4 Tighten all belt spring tensioners to indicated length

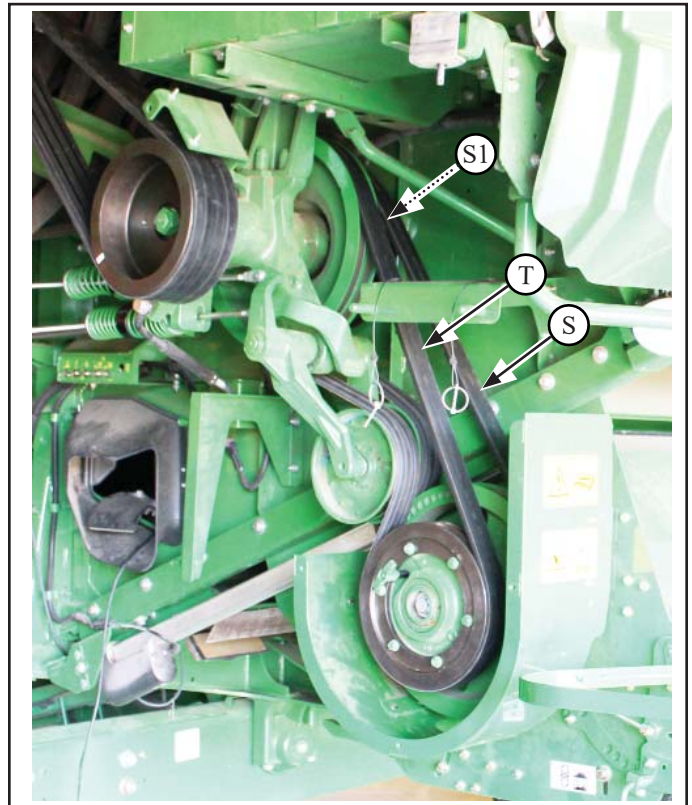

2.7 Shield installation

2.7.1 Install new bottom shield (**U**) onto mount brackets on side of chopper with:

- M8x16 round head bolts and flange nuts (**U1**) x6

2.7.2 Install new bottom shield cover (**V**) onto bottom shield (**U**) with:

- M8x16 flange bolts (**V1**) x3



2.7.3 If replacing factory chopper with powered tailboard spreaders, install jackshaft shield plate (**W**) onto side of jackshaft guard with:

- M8x12 round head bolts and flange nuts (**W1**) x3

2.7.4 Reinstall upper drive shield (**Y**) onto pins and secure in place with


- existing lynch pins (**Y1**) x4



2.8 Swath Panel Brackets - On combines with an overshot beater and rear straw discharge


2.8.1 Relocate swath panel brackets (**A**) from OEM chopper to Redekop chopper

- reuse existing hardware at knockout tab locations

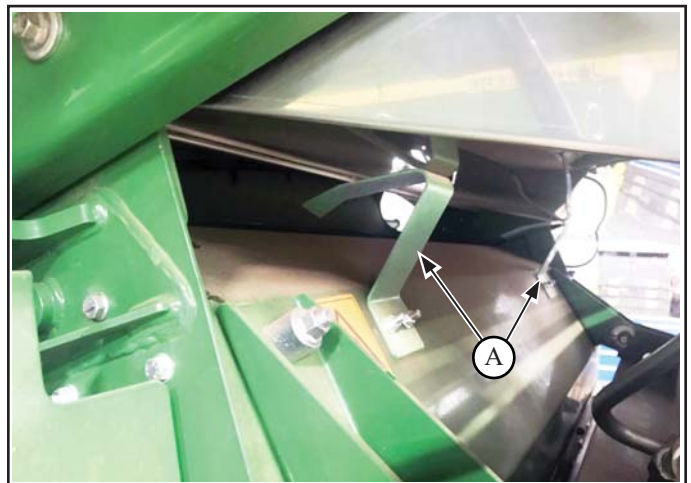


2.8 Tailboard Installation

2.8.1 Remove top tailboard seal assembly (A) from rear of chopper
- to be reinstalled

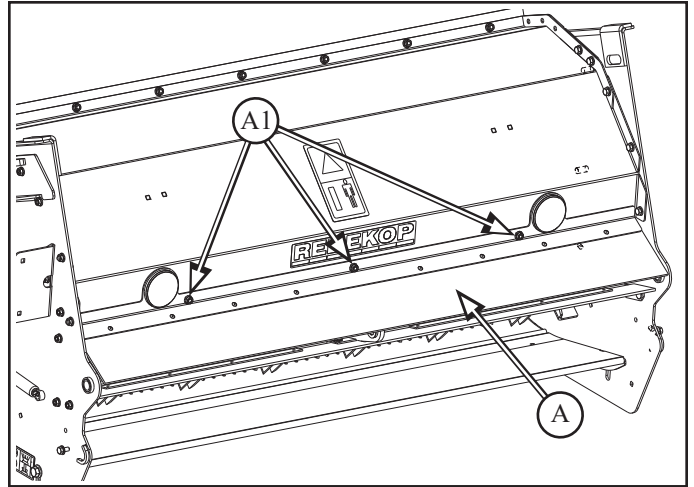

2.8.2 Remove tailboard center mount bracket (B) from rear of chopper
- to be reinstalled

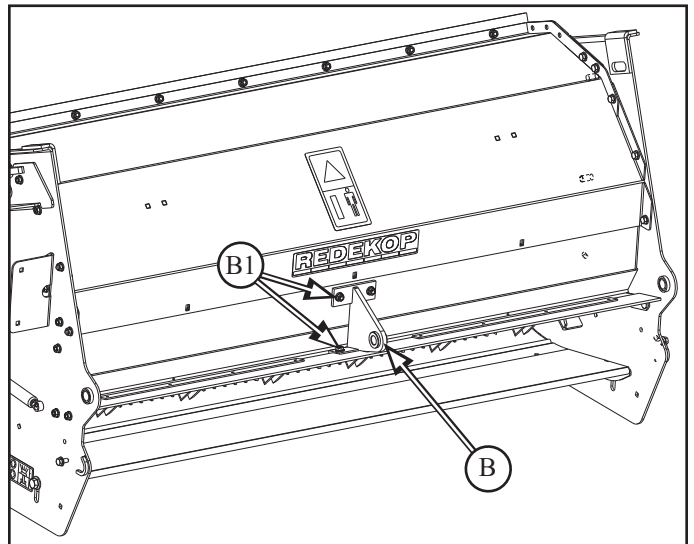


2.8.3 Slide washer (C) onto left tailboard pin (D1)


2.8.4 Slide tailboard mount bracket (B) onto tailboard pin (D1)
- ensure nylon bushing (F) is in hole of bracket (B)

2.8.5 Slide washer (C) onto tailboard pin (D1)


2.8.6 Slide right tailboard (E) onto tailboard pin (D1)

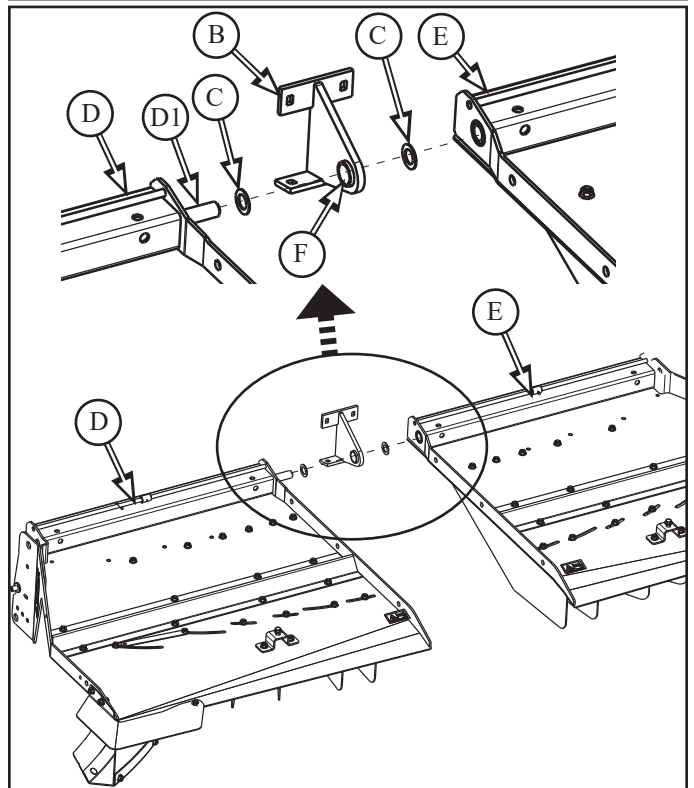

2.8.6 Ensure nylon bushing (F) is in chopper tailboard mount hole (G1), both sides

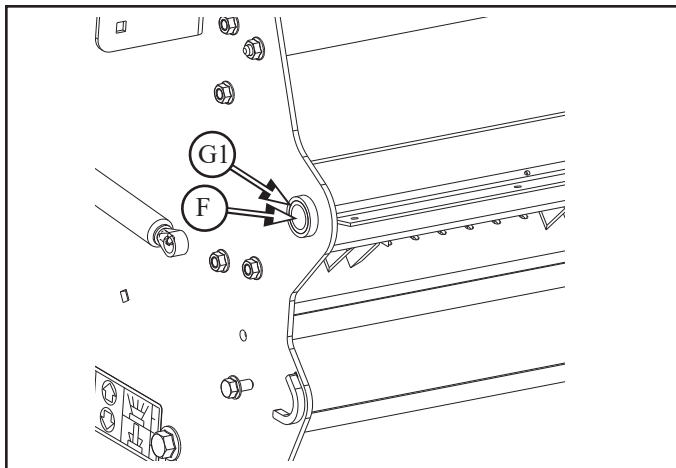


2.8.6 Lift tailboards (D & E) up into place on chopper
- align side holes of tailboard with mount holes (G1) on side wall of chopper

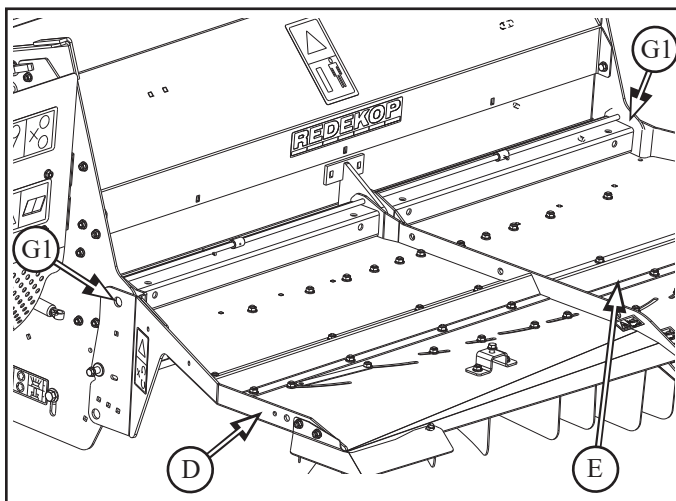


2.8.6.1 Secure tailboards into place, with
- pivot pin (H)
- both sides


2.8.6.1 Secure pivot pin (H) in place, with:
- M8 x 20 round head bolt and flange nut (H1)
- ensure head of bolt is on inside of tailboard
- repeat for other side

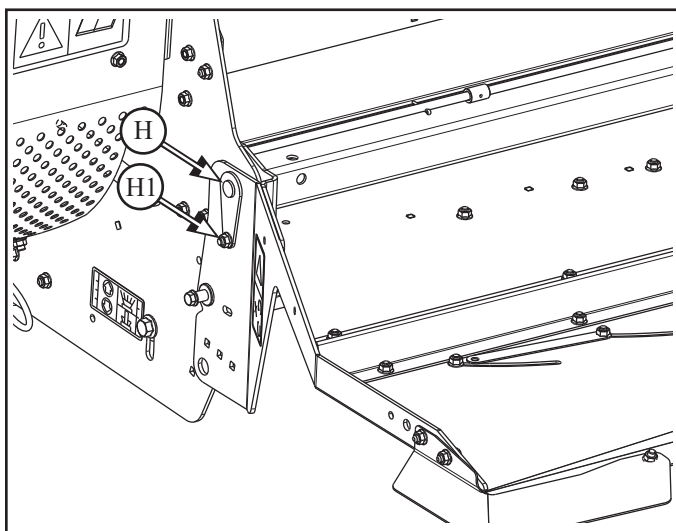


2.8.7 Fasten center tailboard mount bracket (**B**) to rear of chopper, with:
- reuse hardware (**B1**) x4

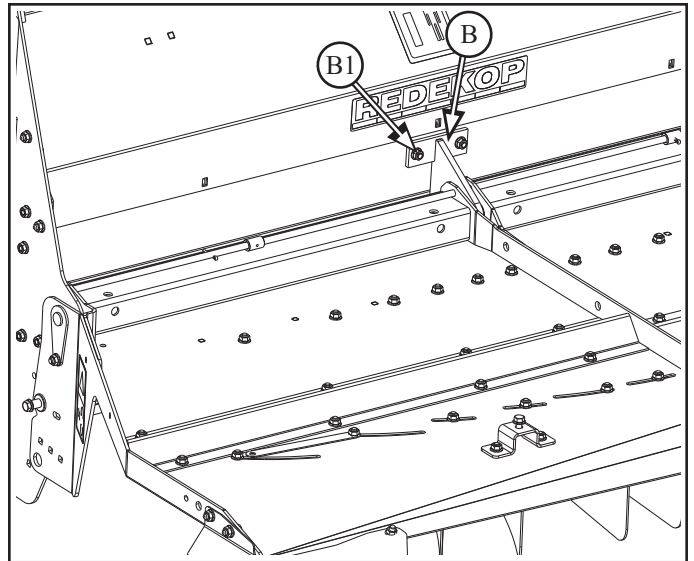

2.8.8 Reinstall top tailboard seal assembly (**A**) to chopper, with:
- reuse hardware (**A1**) x3

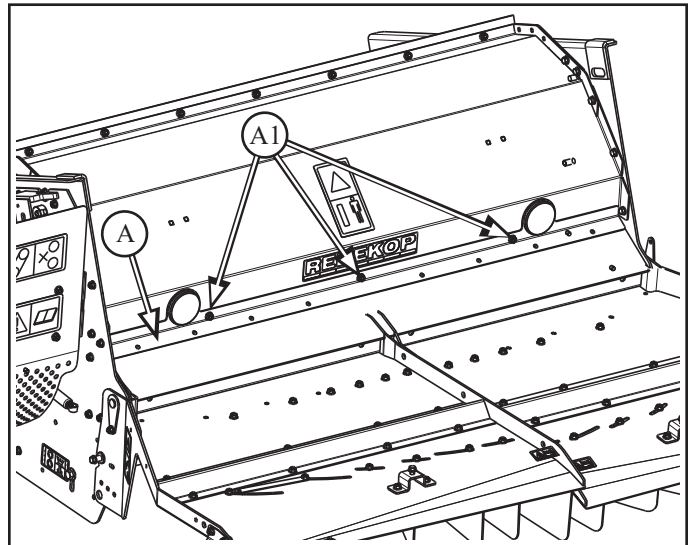



2.8.9 Install gas spring (**P**) onto side of chopper housing and tailboard studs with:
- M8 x 16 flange bolts (**P1**) x2
- both sides

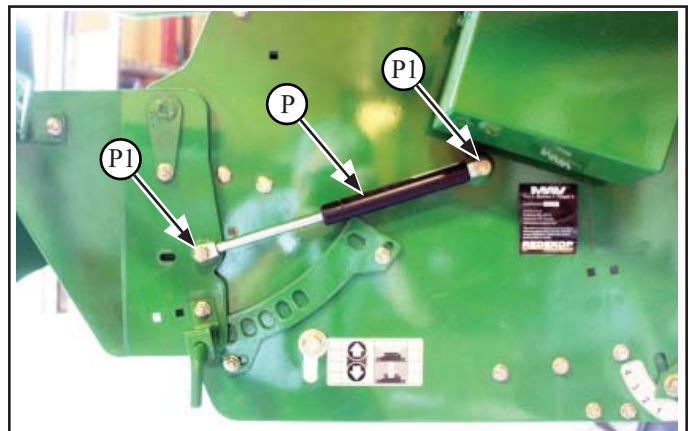

2.9 Tailboard Fin Installation

Parts List:

(AL) CG116GL Fin Straight 22L Lt	Qty 2
(AR) CG116GR Fin Straight 22L Rt	Qty 2
(BL) CG120GL Fin Curve 22L Lt	Qty 2
(BR) CG120GR Fin Curve 22L Rt	Qty 2
(CL) CG237GAL Fin Scooped Assy Lt	Qty 1
(CR) CG237GAR Fin Scooped Assy Rt	Qty 1
(DL) CG761GL Fin Curve 19L Lt	Qty 1
(DR) CG761GR Fin Curve 19L Rt	Qty 1
(EL) CG478GL Corner Extension Lt	Qty 1
(ER) CG478GR Corner Extension Rt	Qty 1
(F) CG733G Connecting Link	Qty 2

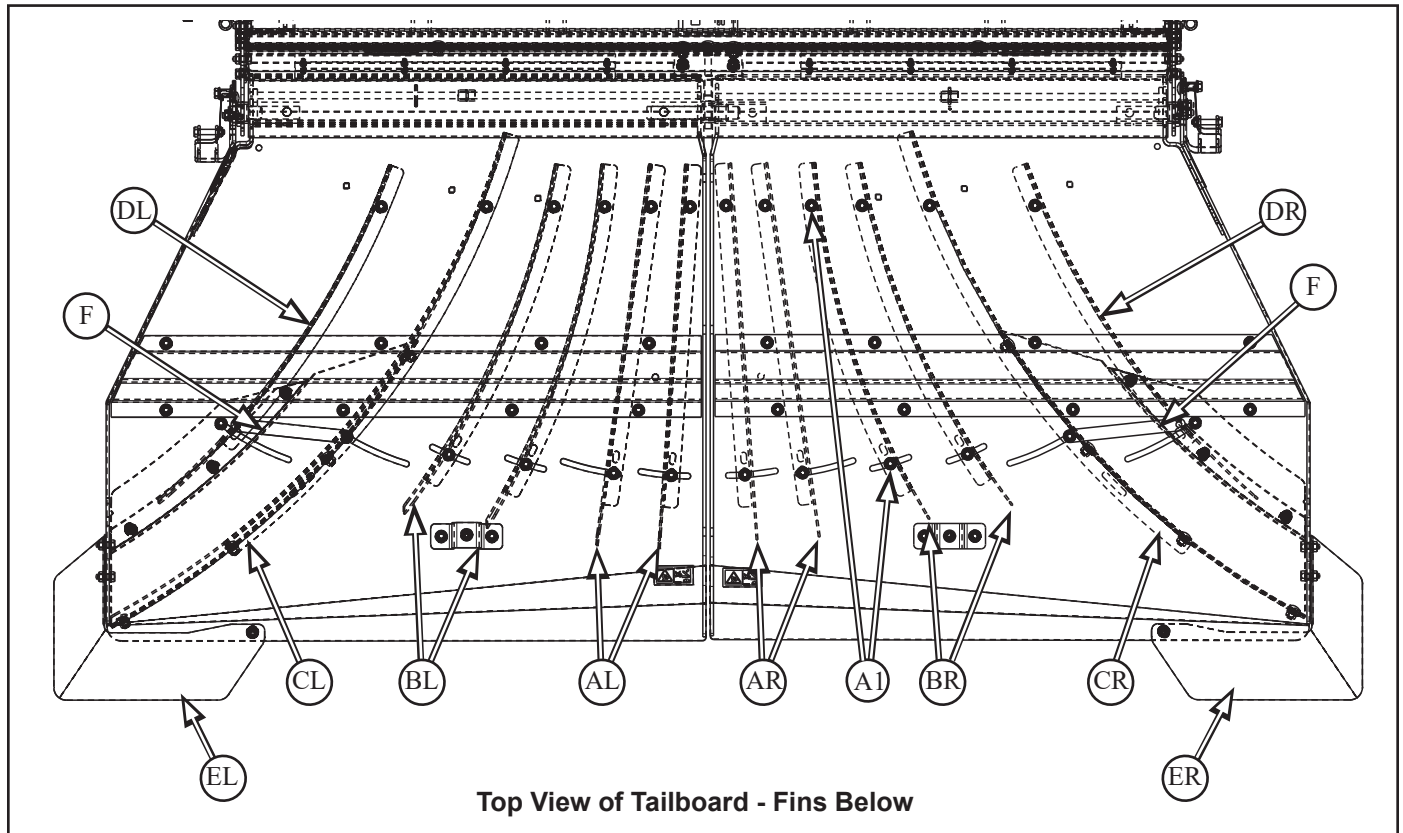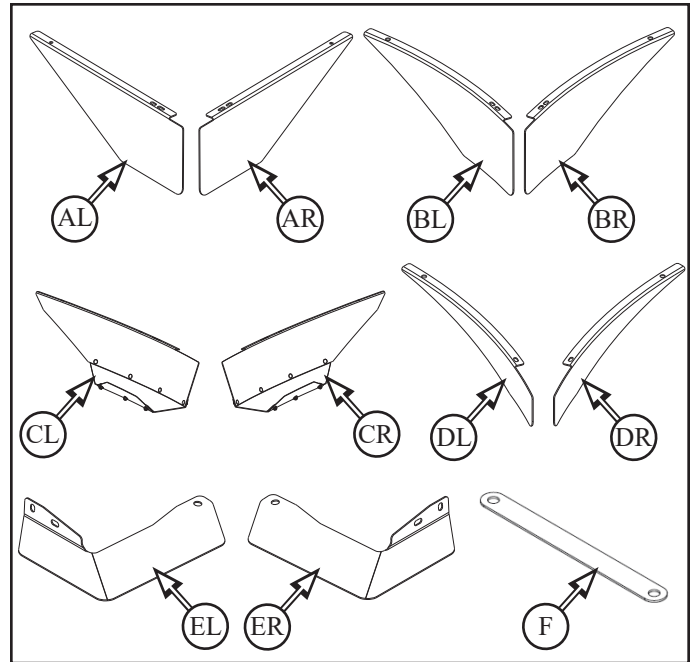

2.9 Tailboard Fin Installation

2.9.1 Install tailboard fins as shown, with:

- M8x16 round head bolts and flange nuts (A1) x2 per fin
- ensure head of bolt is on bottom pointing up

2.9.2 Install connector link (F) to scooped fin and small curved fin (D)

3 Configure Software in Display

If combine has a chopper with powercast tailboard
- change line #118 (to remove powercast tailboard)
- 2nd last digit to 0

If combine is without a chopper, has a spreader
- change line # 112 (to activate chopper)
- 4th last digit to 1

3.1 600 Series Combine

Procedure to reconfigure software:

- Turn key switch ON. **DO NOT** start engine

3.1.1 Select main menu icon



3.1.2 Select message center icon




3.1.3 Select address icon



3.1.4 Select devices



3.1.5 Scroll down / select CAB.001

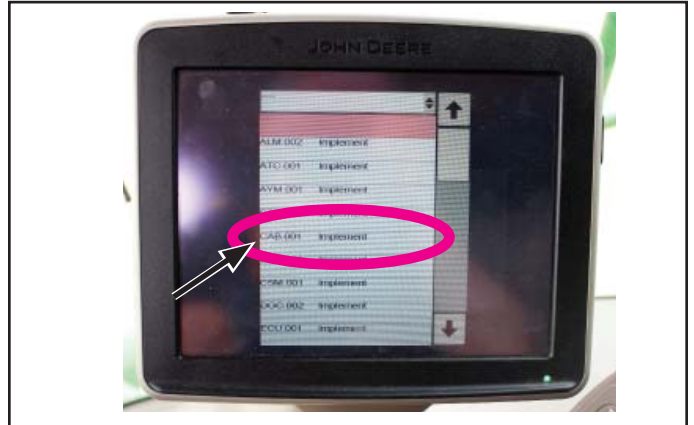


3.1.6 Scroll down to line #118

**** RECORD Number shown on display at line #118 ****
(number will disappear in edit mode)


or

3.1.6 Scroll down to line #112


**** RECORD Number shown on display at line #112 ****
(number will disappear in edit mode)

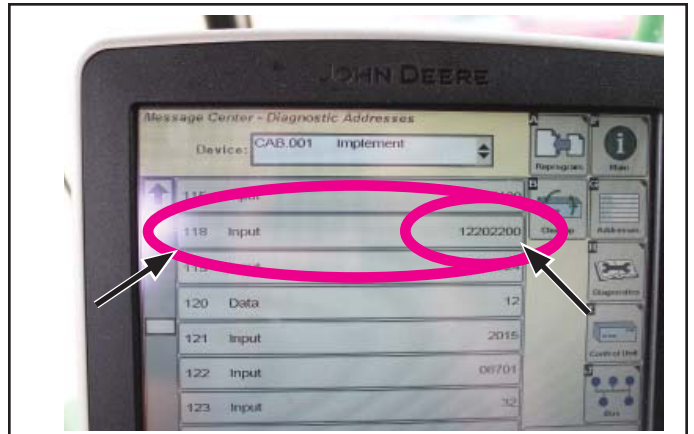

3.1.7 After recording number, Select line #118 (or #112)

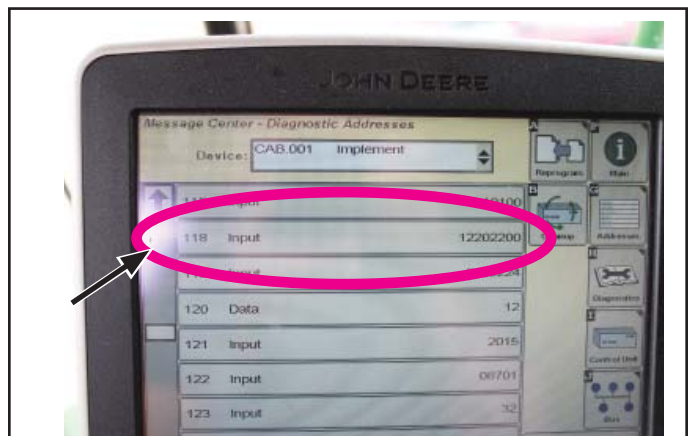

3.1.8 Select edit mode to input new number

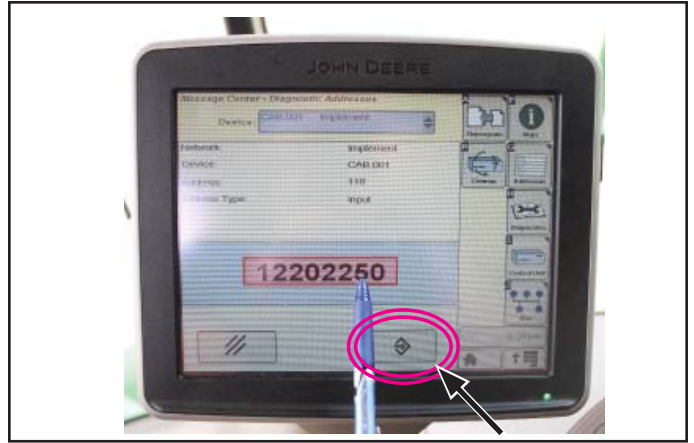


3.1.9 For line #118 - Type in complete new number with 2nd last number being a 0

or

For line #112 - Type in complete new number with 4th last number being a 1


New number will be the original number recorded in previous step, but changing the 1 number as noted above

3.1.10 Select accept

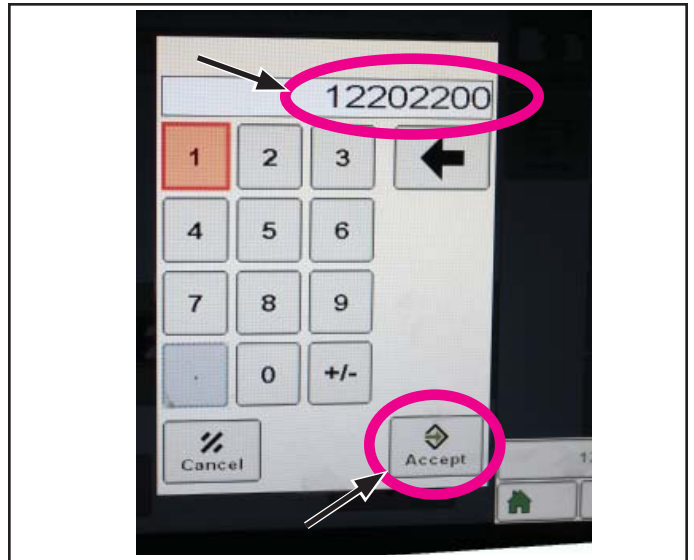


3.1.11 New number now displays

3.1.12 Select accept icon to save the change

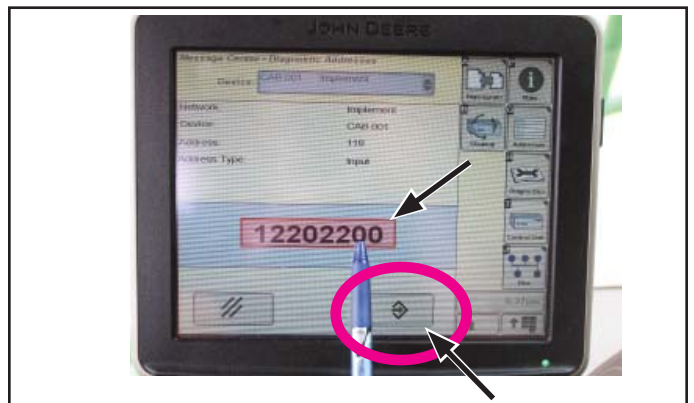

3.1.13 Select home icon

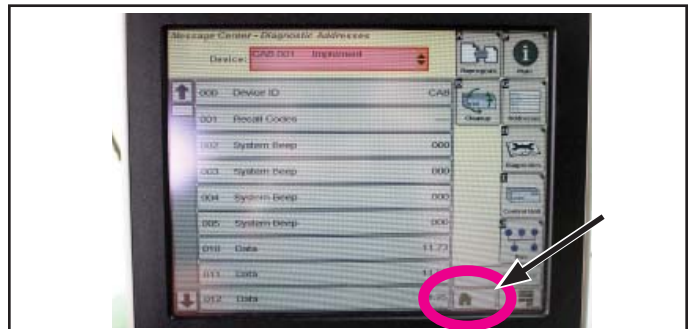

3.2 700 Series Combine

Procedure to reconfigure software:

- Turn key switch ON. **DO NOT** start engine

3.2.1 Select menu icon



3.2.2 Select system

3.2.2.1 Select diagnostics center



3.2.3 Select controller diagnostics



3.2.4 Scroll down / select cab controller (CAB.001)




3.2.5 Scroll down to line #118 and select it

**** RECORD Number shown on display at line #118 ****

or

3.2.5 Scroll down to line #112 and select it

**** RECORD Number shown on display at line #112 ****

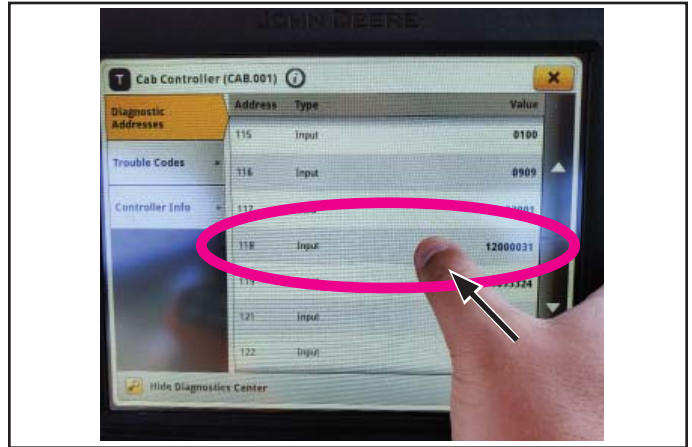

3.2.6 John Deere Tailboard Software Addresses

CAB	111	XnX XXX XX	INPUT	Chopper vane angle adjustment option	0 = Disabled 1 = Enabled
CAB	118	XXX XXX nX	INPUT	Spreader control configuration	0 = No electrical control 1 = Premium spreader control 2 = Straw spreaders. Left and right chaff spreader speed adjusted together. No wind compensation 3 = North American PowerCast and chaff spreaders. Left and right spreader speed adjusted separately for wind compensation 4 = Dual Advanced PowerCast control 5 = Single Advanced PowerCast control 6 = Maxi spreader Rekord independent left/right control 7 = Chaff spreader with speed sensor installed 8 = Both maxi spreader and chaff spreader with speed sensor installed

3.2.7 Select value to input new number



3.2.8 For line #118 - change 2nd last number to a 0

or


For line #112 - change 4th last number to a 1

New number will be the original number recorded in previous step, but changing the number as noted above


3.2.9 Select OK



3.2.10 New number now displays

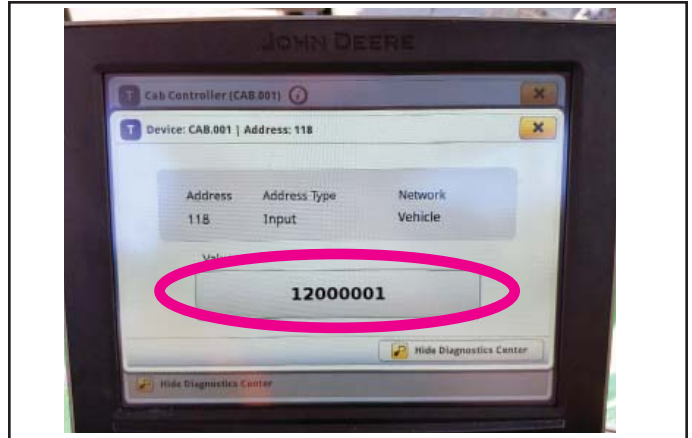

3.2.11 Select the X in upper right corner to close all open windows

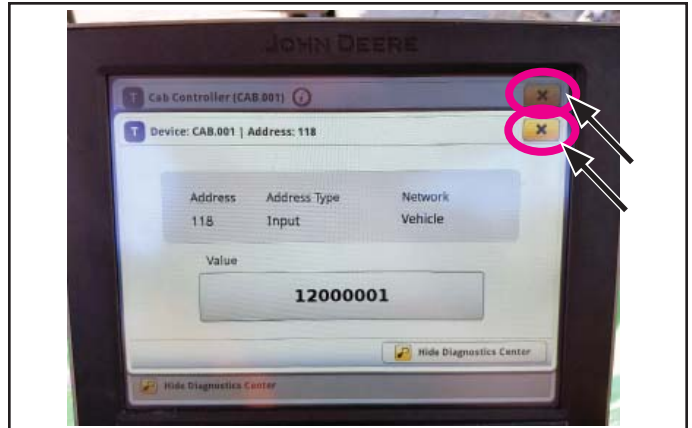

3.2.12 Select home icon

Access and Delete any Diagnostic Trouble Codes

Diagnostic trouble codes may be generated while programming is in progress. Access the diagnostic trouble codes (if any) and delete.

If, after programming, diagnostic trouble codes appear that indicate that a function has not been calibrated, the relevant calibration must be performed.

For instructions on calibration, see relevant John Deere Diagnostic Technical Manual, Section 245

Check Function

Connect battery.

Check new function.

IMPORTANT: Once all the component assemblies have been installed, do an operational check.



CAUTION

Check all fasteners to ensure they have been properly tightened

Torque Table

Nominal Size	Class 8.8	Class 10.9
	Nm / (ft-lbs)	Nm / (ft-lbs)
M8 - flanged	27 / (20)	39 / (29)
	- non flanged	25 / (18)
M10 - flanged	54 / (40)	57 / (42)
	- non flanged	49 / (36)
M12 - flanged	93 / (69)	134 / (98)
	- non flanged	85 / (63)



CAUTION

Wear Hearing Protection during operation



CAUTION

When starting chopper, be sure all people are clear of the rear of the combine



Start threshing module in low speed and listen for clearance problems. If a knocking noise is heard, stop the machine immediately! Fix problem and repeat procedure. Progress to full power when everything is running smoothly at lower speeds.

REDEKOP MANUFACTURING

1.866.REDEKOP (1.866.733.3567)

Saskatoon, Saskatchewan Canada S7K 3J7
info@redkopmfg.com
www.redkopmfg.com

For additional and the most up to date Manuals:



EQR002

REDEKOP™

REDEKOP™