




# KAS PRE-CLEANER

## INSTALLATION MANUAL

**REDEKOP™**

**KA001-01**

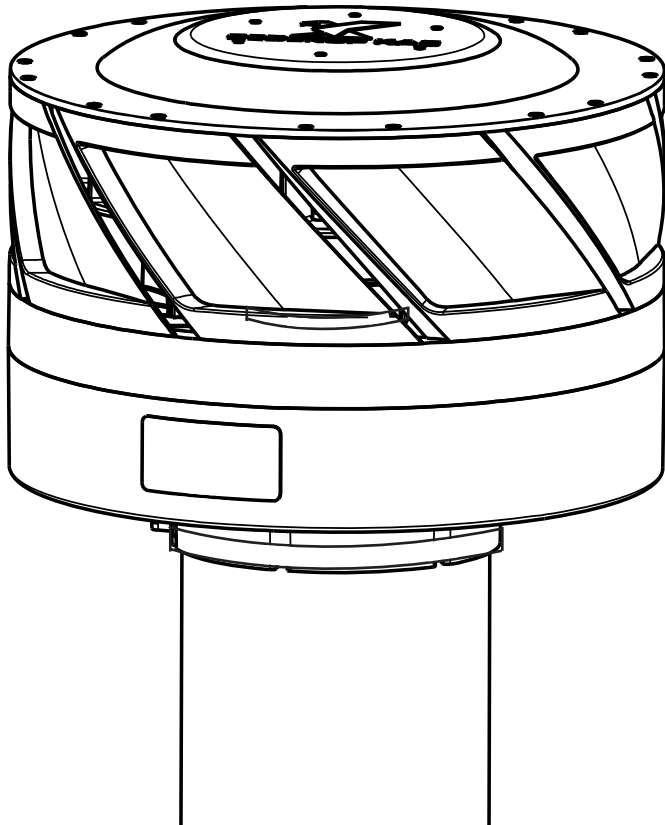


# 1 KAS Pre-cleaner Installation

## Parts List:


KAS Pre-cleaner Assembly (A)  
Clamp T-Bolt Band (B)

Qty 1  
Qty 1

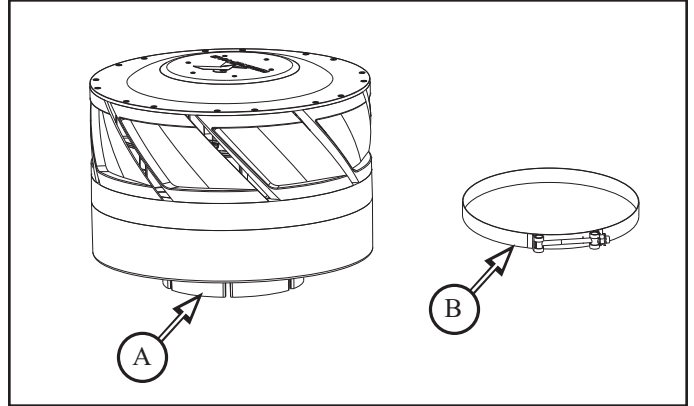


1.1 Install KAS pre-cleaner assembly (A) on to inlet tube (C), with:  
- hose clamp (B)

1.1.1 Torque hose clamp to:  
- 203 mm (8 inch): 20 N\*m (15 ft\*lb)

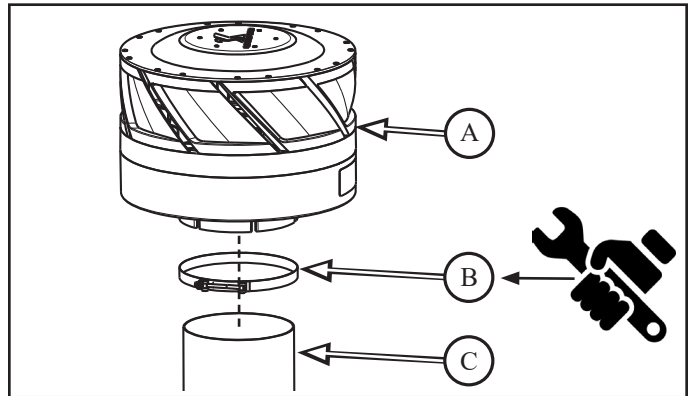

1.2 View with KAS pre-cleaner assembly (A) installed onto inlet tube

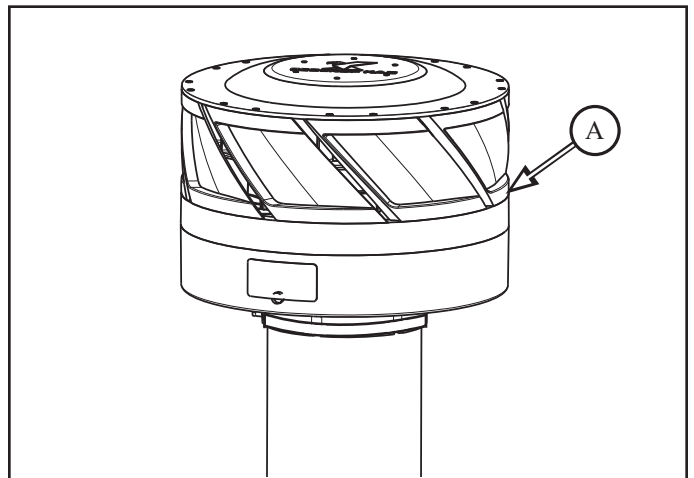

# REDEKOP MANUFACTURING

**1.866.REDEKOP (1.866.733.3567)**

Saskatoon, Saskatchewan Canada S7K 3J7  
info@redkopmfg.com  
www.redkopmfg.com



**CAUTION**

Check all fasteners to ensure they have been properly tightened



**CAUTION**

Check that all tools and loose hardware have been removed from the machine before running

For additional and the most up to date Manuals:



EQR002

**REDEKOP™**

**REDEKOP™**